



ADLINK
TECHNOLOGY INC.

PCI-9118 DG/L, HG/L, HR/L

PCI-Bus Advanced
Data Acquisition Card
User's Manual

Manual Rev. 3.00
Revision Date: December 28, 2005
Part No: 50-11115-202



Recycled Paper

Advance Technologies; Automate the World.



Copyright 2005 ADLINK TECHNOLOGY INC.

All Rights Reserved.

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Trademarks

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Getting Service from ADLINK

Customer Satisfaction is top priority for ADLINK Technology Inc. Please contact us should you require any service or assistance.

ADLINK TECHNOLOGY INC.

Web Site: <http://www.adlinktech.com>
 Sales & Service: Service@adlinktech.com
 TEL: +886-2-82265877
 FAX: +886-2-82265717
 Address: 9F, No. 166, Jian Yi Road, Chungho City, Taipei, 235 Taiwan

Please email or FAX this completed service form for prompt and satisfactory service.

Company Information	
Company/Organization	
Contact Person	
E-mail Address	
Address	
Country	
TEL	FAX:
Web Site	
Product Information	
Product Model	
Environment	OS: M/B: CPU: Chipset: Bios:

Please give a detailed description of the problem(s):



Table of Contents

Table of Contents	i
List of Tables	x
List of Figures	xi
1 Introduction	1
1.1 Features.....	2
1.2 Applications	2
1.3 Specifications.....	3
Analog Input (A/D)	3
Digital I/O (DIO)	4
Programmable Counter	4
General Specifications	4
1.4 Software Support.....	5
Programming Library	5
DAQ-LVIEW PnP: LabVIEW Driver	5
PCIS-VEE: HP-VEE Driver	6
PCIS-OCX: ActiveX Controls	6
DASYLab TM PRO	6
PCIS-DDE: DDE Server and InTouch TM	6
PCIS-ISG: ISaGRAFT TM driver	7
PCIS-ICL: InControl TM Driver	7
PCIS-OPC: OPC Server	7
2 Installation	9
2.1 What You Have.....	9
2.2 Unpacking.....	9
2.3 Device Installation for Windows Systems.....	10
2.4 PCI-9118DG/L, HG/L Layout.....	10
2.5 PCI-9118HR/L Layout.....	11
2.6 Hardware Installation Outline.....	11
Hardware configuration	11
PCI slot selection	11
Installation Procedure	12
3 Signal Connections	13
3.1 Connectors Pin Assignment	13

3.2	Analog Input Signal Connection.....	14
	Single-ended Mode	14
	Differential input mode	15
3.3	Digital I/O Connection	16
3.4	Timer / Counter Connection.....	17
4	Registers Format	19
4.1	I/O Port Address	19
4.2	A/D Data Registers	20
4.3	A/D control Register.....	21
4.4	A/D Status Register	23
4.5	Digital I/O register	25
4.6	Software Trigger Register	26
4.7	Internal Timer/Counter Register.....	26
4.8	A/D Gain/Channel Register.....	27
4.9	A/D Burst Number Register	27
4.10	A/D Auto Scan Mode	28
4.11	A/D Function Register.....	29
4.12	A/D FIFO Reset Register	31
4.13	Interrupt Control Register.....	32
4.14	Interrupt Status Register	33
5	Operation Theorem.....	35
5.1	A/D Conversion.....	35
	A/D Conversion Procedure	35
	A/D Trigger Sources and conversion modes	35
	A/D Data Transfer Modes	38
	Trigger Acquisition Modes	39
	Specifying Channels and Gains in the Channel-Gain Queue	41
5.2	Digital Input and Output	41
5.3	Timer/Counter Operation	41
6	C/C++ Library	47
6.1	Libraries Installation	47
6.2	Programming Guide.....	48
	Naming Convention	48
	Data Types	48
6.3	_9118_Initial	49
	@ Description	49
	@ Syntax	49
	@ Argument	49

	@ Return Code	50
6.4	_9118_Switch_Card_No.....	51
	@ Description	51
	@ Syntax	51
	@ Argument	51
	@ Return Code	51
6.5	_9118_DI	52
	@ Description	52
	@ Syntax	52
	@ Argument	52
	@ Return Code	52
6.6	_9118_DI_Channel.....	53
	@ Description	53
	@ Syntax	53
	@ Argument	53
	@ Return Code	53
6.7	_9118_DO	54
	@ Description	54
	@ Syntax	54
	@ Argument	54
	@ Return Code	54
6.8	_9118_AD_Reset_AFIFO.....	55
	@ Description	55
	@ Syntax	55
	@ Argument	55
	@ Return Code	55
6.9	_9118_AD_Bgnset_AFIFO.....	56
	@ Description	56
	@ Syntax	56
	@ Argument	56
	@ Return Code	56
6.10	_9118_AD_Endset_AFIFO.....	57
	@ Description	57
	@ Syntax	57
	@ Argument	57
	@ Return Code	57
6.11	_9118_AD_Reset_DFIFO.....	58
	@ Description	58
	@ Syntax	58
	@ Argument	58

	@ Return Code	58
6.12	_9118_AD_Set_Burst_No.....	59
	@ Description	59
	@ Syntax	59
	@ Argument	59
	@ Return Code	59
6.13	_9118_INT_Set_CtrlReg.....	60
	@ Description	60
	@ Syntax	60
	@ Argument	60
	@ Return Code	60
6.14	_9118_AD_Set_GainChn	61
	@ Description	61
	@ Syntax	61
	@ Argument	61
	@ Return Code	62
6.15	_9118_AD_Set_Scan	63
	@ Description	63
	@ Syntax	63
	@ Argument	63
	@ Return Code	63
6.16	_9118_AD_Soft_Trig	65
	@ Description	65
	@ Syntax	65
	@ Argument	65
	@ Return Code	65
6.17	_9118_AD_Set_Unip	66
	@ Description	66
	@ Syntax	66
	@ Argument	66
	@ Return Code	66
6.18	_9118_AD_Set_Diff	67
	@ Description	67
	@ Syntax	67
	@ Argument	67
	@ Return Code	67
6.19	_9118_AD_Set_SoftG	68
	@ Description	68
	@ Syntax	68
	@ Argument	68

	@ Return Code	68
6.20	_9118_AD_Set_ExtG	69
	@ Description	69
	@ Syntax	69
	@ Argument	69
	@ Return Code	69
6.21	_9118_AD_Set_ExtM	70
	@ Description	70
	@ Syntax	70
	@ Argument	70
	@ Return Code	70
6.22	_9118_AD_Set_TmrTr.....	71
	@ Description	71
	@ Syntax	71
	@ Argument	71
	@ Return Code	71
6.23	_9118_AD_Set_Int	72
	@ Description	72
	@ Syntax	72
	@ Argument	72
	@ Return Code	72
6.24	_9118_AD_Set_Dma.....	73
	@ Description	73
	@ Syntax	73
	@ Argument	73
	@ Return Code	73
6.25	_9118_AD_Set_CtrlReg	74
	@ Description	74
	@ Syntax	74
	@ Argument	74
	@ Return Code	74
6.26	_9118_AD_Set_PDTrg	75
	@ Description	75
	@ Syntax	75
	@ Argument	75
	@ Return Code	75
6.27	_9118_AD_Set_PETrg	76
	@ Description	76
	@ Syntax	76
	@ Argument	76

	@ Return Code	76
6.28	_9118_AD_Set_BSSH.....	77
	@ Description	77
	@ Syntax	77
	@ Argument	77
	@ Return Code	77
6.29	_9118_AD_Set_BM.....	78
	@ Description	78
	@ Syntax	78
	@ Argument	78
	@ Return Code	78
6.30	_9118_AD_Set_BS.....	79
	@ Description	79
	@ Syntax	79
	@ Argument	79
	@ Return Code	79
6.31	_9118_AD_Set_PM.....	80
	@ Description	80
	@ Syntax	80
	@ Argument	80
	@ Return Code	80
6.32	_9118_AD_Set_AM.....	81
	@ Description	81
	@ Syntax	81
	@ Argument	81
	@ Return Code	81
6.33	_9118_AD_Set_Start.....	82
	@ Description	82
	@ Syntax	82
	@ Argument	82
	@ Return Code	82
6.34	_9118_AD_Set_FuncVal.....	83
	@ Description	83
	@ Syntax	83
	@ Argument	83
	@ Return Code	83
6.35	_9118_AD_Aquire.....	84
	@ Description	84
	@ Syntax	84
	@ Argument	84

	@ Return Code	84
6.36	_9118_AD_DMA_Start	85
	@ Description	85
	@ Syntax	85
	@ Argument	85
	@ Return Code	87
6.37	_9118_AD_DMA_Status.....	88
	@ Description	88
	@ Syntax	88
	@ Argument	88
	@ Return Code	88
6.38	_9118_AD_DMA_Stop	89
	@ Description	89
	@ Syntax	89
	@ Argument	89
	@ Return Code	89
6.39	_9118_ContDmaStart	90
	@ Description	90
	@ Syntax	90
	@ Argument	91
	@ Return Code	92
6.40	_9118_CheckHalfReady.....	93
	@ Description	93
	@ Syntax	93
	@ Argument	93
	@ Return Code	93
6.41	_9118_DblBufferTransfer	94
	@ Description	94
	@ Syntax	94
	@ Argument	94
	@ Return Code	94
6.42	_9118_GetOverrunStatus.....	95
	@ Description	95
	@ Syntax	95
	@ Argument	95
	@ Return Code	95
6.43	_9118_ContDmaStop	96
	@ Description	96
	@ Syntax	96
	@ Argument	96

	@ Return Code	96
6.44	_9118_AD_INT_Start.....	97
	@ Description	97
	@ Syntax	97
	@ Argument	97
	@ Return Code	98
6.45	_9118_AD_INT_Status.....	99
	@ Description	99
	@ Syntax	99
	@ Argument	99
	@ Return Code	99
6.46	_9118_AD_INT_Stop.....	100
	@ Description	100
	@ Syntax	100
	@ Argument	100
	@ Return Code	100
6.47	_9118_TIMER_Start.....	101
	@ Description	101
	@ Syntax	101
	@ Argument	101
	@ Return Code	101
6.48	_9118_TIMER_Read.....	102
	@ Description	102
	@ Syntax	102
	@ Argument	102
	@ Return Code	102
6.49	_9118_TIMER_Stop.....	103
	@ Description	103
	@ Syntax	103
	@ Argument	103
	@ Return Code	103
6.50	W_9118_Set_Trig.....	104
	@ Description	104
	@ Syntax	104
	@ Argument	104
	@ Return Code	105
6.51	W_9118_Alloc_AI_Mem.....	106
	@ Description	106
	@ Syntax	106
	@ Argument	106

	@ Return Code	106
6.52	W_9118_Free_AI_Mem.....	107
	@ Description	107
	@ Syntax	107
	@ Argument	107
	@ Return Code	107
6.53	W_9118_Get_Sample	108
	@ Description	108
	@ Syntax	108
	@ Argument	108
	@ Return Code	108
7	Calibration.....	109
7.1	What do you need.....	109
7.2	VR Assignment.....	109
7.3	A/D Adjustment.....	110
	Bipolar Calibration	110
	Unipolar Calibration	110
8	Software Utility	111
8.1	Running 9118util.exe	111
8.2	System Configuration	112
8.3	Calibration.....	113
8.4	Functional Testing	115
	Warranty Policy.....	117

List of Tables

Table 4-1: I/O Address	19
Table 7-1: VRs Functions	109

List of Figures

Figure 2-1: PCB Layout of the PCI-9118DG/L, HG/L	10
Figure 2-2: PCB Layout of the PCI-9118HR/L	11
Figure 3-1: Pin Assignment of CN1	13
Figure 3-2: Floating source and single-ended	15
Figure 3-3: Ground-referenced source and differential input	15
Figure 3-4: Floating source and differential input.....	16
Figure 3-5: Digital I/O Connection.....	16
Figure 3-6: Block Diagram of 8254 Timer/Counter	17
Figure 8-1: Function Testing Menu Window	115
Figure 8-2: A/D with Polling Test window	116

1 Introduction

The PCI-9118/L series are the simplified version of the phase-out PCI-9118 series. The PCI-9118/L series provides fully compatible functionalities as the PCI-9118 series except the analog output function. The PCI-9118DG/L and PCI-9118HG/L feature 12-bit resolution, with sampling rate up to 333kS/s, and the PCI-9118HR/L features 16-bit resolution, with sampling rate up to 100kS/s. The 256-location channel-gain queues on PCI-9118/L series allow high-speed data acquisition with different gains on each channel and non-sequential order of automatic analog input scanning capability. The on-board 1k-sample A/D FIFO ensures reliable high-speed data acquisition under Windows operating system. The data can be transferred through bus-mastering DMA with gap-free, continuous high throughput, even for a large amount of data.

1.1 Features

The PCI-9118/L PCI Bus Advanced Data Acquisition Card provides the following advanced features:

- ▶ 32-bit PCI-Bus, plug and play
- ▶ 12-bit (9118DG/L, HG/L) or 16-bit (9118HR/L) analog input resolution
- ▶ On-board A/D 1K FIFO memory
- ▶ Channel-Gain queue for high speed acquisition at different gain
- ▶ Up to 330KHz (9118DG/L, HG/L) or 100KHz (9118HR/L) A/D sampling rate Bipolar or Unipolar input signals
- ▶ Auto-scanning channel selection
- ▶ 16 single-ended or 8 differential analog input channels
- ▶ Bipolar or Unipolar input signals
- ▶ Programmable gain of x1, x2, x4, x8 (9118DG/L, HR/L) or x1, x10, x100, x1000 (9118HG/L)
- ▶ Programmable burst mode sampling emulates simultaneous sample & hold
- ▶ 4 digital input and 4 digital output channels
- ▶ Three A/D trigger modes : software trigger, programmable pacer trigger, and external pulse trigger.
- ▶ 50-pin D-type connector
- ▶ Compact size : half-size PCB

1.2 Applications

- ▶ Industrial and laboratory ON/OFF control
- ▶ Energy management
- ▶ Annunciation
- ▶ 16 TTL/DTL compatible digital input channels
- ▶ Security controller
- ▶ Product test
- ▶ BCD interface driver

1.3 Specifications

Analog Input (A/D)

- ▶ Converter:
 - ▷ 9118DG/L, HG/L: B.B. ADS7800 or equivalent
 - ▷ 9118HR/L: B.B. ADS7805 or equivalent
- ▶ Input Channels: 16 single-ended or 8 differential
- ▶ A/D FIFO Buffer Size: 1024 location
- ▶ Channel/Gain Queue Length: 256 location
- ▶ Resolution: 12-bit (9118DG/L, HG/L) or 16-bit(9118HR/L)
- ▶ Input Range: (Software controlled)
 - ▷ 9118DG/L, HR/L:
 - Bipolar: $\pm 5V$, $\pm 0.5V$, $\pm 0.25V$, $\pm 0.625V$
 - Unipolar: 0~10V, 0~5V, 0~2.5V, 0~1.25V
 - ▷ 9118HG/L:
 - Bipolar: $\pm 5V$, $\pm 0.5V$, $\pm 0.05V$, $\pm 0.005V$
 - Unipolar: 0~10V, 0~1V, 0~0.1V, 0~0.01V
- ▶ Overvoltage Protection: 70V peak-to-peak
- ▶ On chip sample-and hold
- ▶ Accuracy:
 - ▷ 0.01% of FSR ± 1 LSB
 - ▷ 0.02% of FSR ± 1 LSB
- ▶ Input Impedance: 10,000 M Ω // 6pF
- ▶ Trigger Mode: Pre-trigger, Post-trigger, and About-Trigger
- ▶ Data Transfer: Program control, Interrupt, DMA (Bus mastering)
- ▶ Data Throughput:
 - ▷ 330KHz (maximum) for 9118DG/L, HG/L
 - ▷ 100KHz (maximum) for 9118HR/L

Digital I/O (DIO)

- ▶ Channel: 4 TTL compatible inputs and outputs
- ▶ Input Voltage:
 - ▷ Low: $V_{IL}=0.8\text{ V max.}; I_{IL}=0.2\text{mA max.}$
 - ▷ High: $V_{IH}=2.0\text{V max.}; I_{IH}=0.02\text{mA max}$
- ▶ Output Voltage :
 - ▷ Low: $V_{OL}=0.5\text{ V max.}; I_{OL}=8\text{mA max.}$
 - ▷ High: $V_{OH}=2.7\text{V min}; I_{OH}=400\mu\text{A}$

Programmable Counter

- ▶ Device: 82C54
- ▶ A/D Pacer: 32-bit timer (two 16-bit counter cascaded together) with a 4MHz time base
- ▶ Max Pacer Rate: 333 KHz
- ▶ Min Pacer Rate: 0.0012 Hz

General Specifications

- ▶ Connector: 50-pin D-type SCSI-II connector
- ▶ Operating Temperature: $0^{\circ}\text{C} \sim 60^{\circ}\text{C}$
- ▶ Storage Temperature: $-20^{\circ}\text{C} \sim 80^{\circ}\text{C}$
- ▶ Humidity: 5 ~ 95%, non-condensing
- ▶ Power Consumption:
 - ▷ PCI-9118DG/L, HG/L
 - +5V@450mA typical
 - +12V@200mA typical
 - 12V@50mA typical
 - ▷ PCI-9118HR/L
 - +5V@485mA typical
 - +12V@180mA typical
 - 12V@50mA typical
- ▶ Dimension: Compact size only 102mm (H) x 173mm (L)

1.4 Software Support

ADLINK provides versatile software drivers and packages for users' different approach to built-up a system. We not only provide programming library such as DLL for many Windows systems, but also provide drivers for many software package such as LabVIEW[®], HP VEETM, DASYLab[™], InTouch[™], InControl[™], ISaGRAF[™], etc.

All the software options are included in the ADLINK CD. The non-free software drivers are protected with serial licensed code. Without the software serial number, you can still install them and run the demo version for two hours for demonstration purpose. Please contact with your dealer to purchase the formal license serial code.

Programming Library

For customers who are writing their own programs, we provide function libraries for many different operating systems, including:

- ▶ DOS Library: Borland C/C++ and Microsoft C++, the functions descriptions are included in this user's guide.
- ▶ Windows 95 DLL: For VB, VC++, Delphi, BC5, the functions descriptions are included in this user's guide.
- ▶ PCIS-DASK: Include device drivers and DLL for Windows 98/NT/2000/XP. DLL is binary compatible across Windows 98/NT/2000/XP. That means all applications developed with PCIS-DASK are compatible across Windows 98/NT/2000/XP. The developing environment can be VB, VC++, Delphi, BC5, or any Windows programming language that allows calls to a DLL. The user's guide and function reference manual of PCIS-DASK are in the CD. Please refer the PDF manual files under \\Manual\\Software Package\\PCIS-DASK. The above software drivers are shipped with the board. Please refer to the "Software Installation Guide" to install these drivers.

DAQ-LVIEW PnP: LabVIEW Driver

DAQ-LVIEW PnP contains the VIs, which are used to interface with NI's LabVIEW[®] software package. The DAQ-LVIEW PnP

supports Windows 98/NT/2000/XP. The LabVIEW® drivers are free shipped with the board. You can install and use them without license. For detail information about DAQ-LVIEW PnP, please refer to the user's guide in the CD.(\\Manual\\Software Package\\DAQ-LVIEW PnP)

PCIS-VEE: HP-VEE Driver

The PCIS-VEE includes the user objects, which are used to interface with HP VEE software package. PCIS-VEE supports Windows 95/98/NT. The HP-VEE drivers are free shipped with the board. You can install and use them without license. For detail information about PCIS-VEE, please refer to the user's guide in the CD.

(\\Manual\\Software Package\\PCIS-VEE)

PCIS-OCX: ActiveX Controls

We suggest the customers who are familiar with ActiveX controls and VB/VC++ programming use the PCIS-OCX ActiveX Control components library for developing applications. The PCIS-OCX is designed under Windows NT/98/2000/XP. For more detailed information about PCIS-OCX, please refer to the user's guide in the CD.

(\\Manual\\Software Package\\PCIS-OCX)

DASYLab™ PRO

DASYLab is an easy-to-use software package, which provides easy-setup instrument functions such as FFT analysis. Please contact us to get DASYLab PRO, which include DASYLab and ADLINK hardware drivers.

PCIS-DDE: DDE Server and InTouch™

DDE stands for Dynamic Data Exchange specifications. The PCIS-DDE includes the PCI cards' DDE server. The PCIS-DDE server is included in the ADLINK CD. It needs license. The DDE server can be used conjunction with any DDE client under Windows NT.

PCIS-ISG: ISaGRAFTM driver

The ISaGRAF WorkBench is an IEC1131-3 SoftPLC control program development environment. The PCIS-ISG includes ADLINK products target drivers for ISaGRAF under Windows NT environment. The PCIS-ISG is included in the ADLINK CD. It needs license.

PCIS-ICL: InControlITM Driver

PCIS-ICL is the InControl driver which support the Windows NT. The PCIS-ICL is included in the ADLINK CD. It needs license.

PCIS-OPC: OPC Server

PCIS-OPC is an OPC Server, which can link with the OPC clients. There are many software packages on the market can provide the OPC clients now. The PCIS-OPC supports the Windows NT. It needs license.

2 Installation

This chapter describes how to install the PCI-9118DG/L, HG/L, HR/L. The contents in the package and unpacking information that you should be careful are described.

The PCI-9118DG/L, HG/L, HR/L supports plug-and-play and the IRQ, port address and BIOS address are assigned automatically. So, you do not need to set above configuration as you use ISA form factor DAS card. For system reliability, some critical settings for analog input and output need to be assigned manually, because these settings will not be changed after your data acquisition system configuration is decided. It will let your system get more reliability and safety (users can not change the configuration by software directly) when your system is running.

2.1 What You Have

In addition to this User's Guide, the package includes the following items:

- ▶ PCI-9118/L Enhanced Multi-function Data Acquisition Card
- ▶ ADLINK CD
- ▶ Software Installation Guide

If any of these items is missing or damaged, contact the dealer from whom you purchased the product. Save the shipping materials and carton in case you want to ship or store the product in the future.

2.2 Unpacking

Your PCI-9118/L card contains sensitive electronic components that can be easily damaged by static electricity.

The card should be handled on a grounded anti-static mat. The operator should be wearing an anti-static wristband, grounded at the same point as the anti-static mat.

Inspect the card module carton for obvious damage. Shipping and handling may cause damage to your module. Be sure there are no shipping and handling damages on the module before processing.

After opening the card module carton, extract the system module and place it only on a grounded anti-static surface with component side up.

Again inspect the module for damage. Press down on all the socketed IC's to make sure that they are properly seated. Do this only with the module place on a firm flat surface.

Note : DO NOT APPLY POWER TO THE CARD IF IT HAS BEEN DAMAGED.

You are now ready to install your PCI-9118/L.

2.3 Device Installation for Windows Systems

Once Windows 98/NT/2000/XP has started, the Plug and Play function of Windows system will find the new NuDAQ/NuIPC cards. If this is the first time to install NuDAQ/NuIPC cards in your Windows system, you will be informed to input the device information source. Please refer to the "Software Installation Guide" for the steps of installing the device.

2.4 PCI-9118DG/L, HG/L Layout

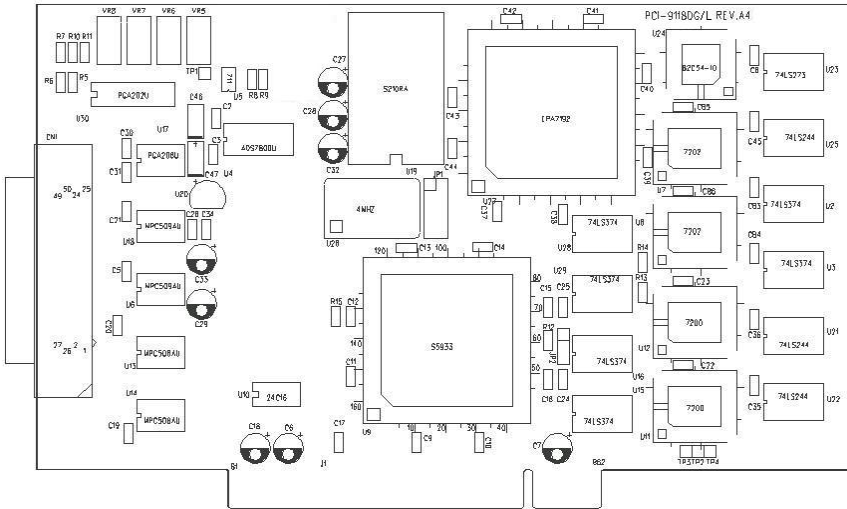


Figure 2-1: PCB Layout of the PCI-9118DG/L, HG/L

2.5 PCI-9118HR/L Layout

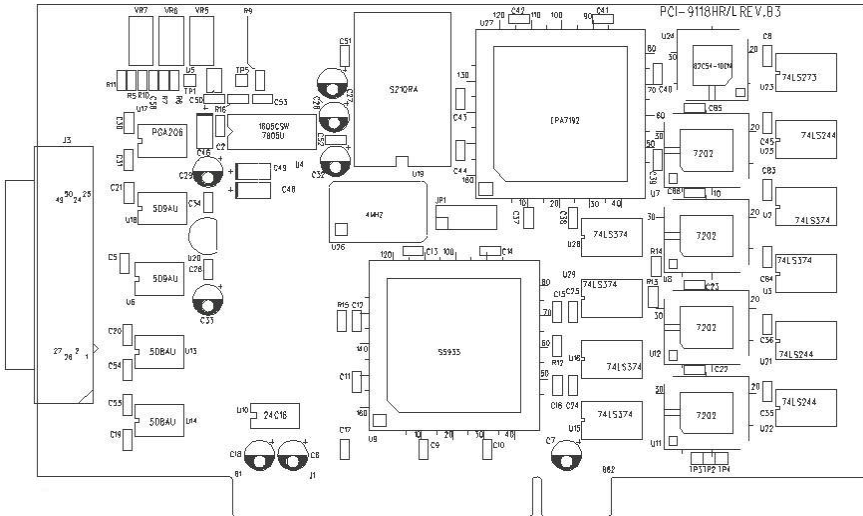


Figure 2-2: PCB Layout of the PCI-9118HR/L

2.6 Hardware Installation Outline

Hardware configuration

The PCI cards (or CompactPCI cards) are equipped with plug and play PCI controller, it can request base addresses and interrupt according to PCI standard. The system BIOS will install the system resource based on the PCI cards' configuration registers and system parameters (which are set by system BIOS). Interrupt assignment and memory usage (I/O port locations) of the PCI cards can be assigned by system BIOS only. These system resource assignments are done on a board-by-board basis. It is not suggested to assign the system resource by any other methods.

PCI slot selection

The PCI card can be inserted to any PCI slot without any configuration for system resource.

Installation Procedure

1. Turn off your computer.
2. Turn off all accessories (printer, modem, monitor, etc.) connected to your computer.
3. Remove the cover from your computer.
4. Setup jumpers on the PCI or CompactPCI card.
5. Select a 32-bit PCI slot. PCI slot are short than ISA or EISA slots, and are usually white or ivory.
6. Before handling the PCI cards, discharge any static buildup on your body by touching the metal case of the computer. Hold the edge and do not touch the components.
7. Position the board into the PCI slot you selected.
8. Secure the card in place at the rear panel of the system.

3 Signal Connections

This chapter describes the connector of the PCI-9118/L, also the signal connection between the PCI-9118/L and external devices, such as daughter boards or other devices.

3.1 Connectors Pin Assignment

The PCI-9118/L is equipped one 50-pin D-type connector - CN1.

CN1 for digital signal input, digital signal output, analog input, analog output and timer/counter's signals. The pin assignment for each connectors are illustrated in Figure 3.1.

CN1 - Digital Signal Input, Digital Signal Output, Analog Input/Output & Counter/Timer

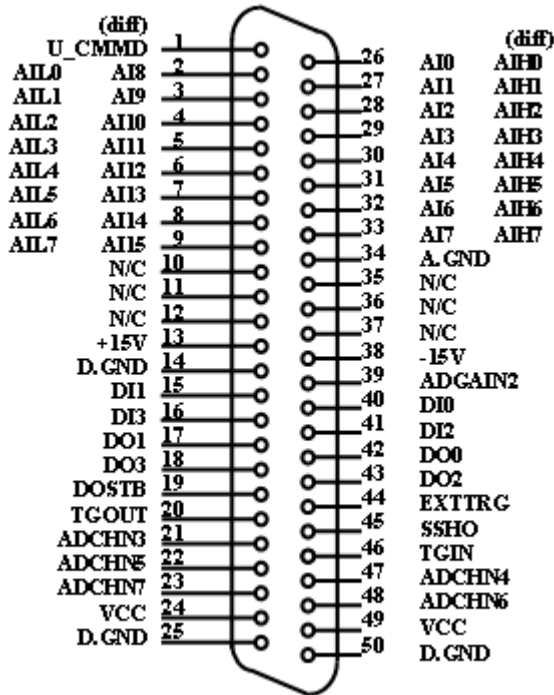


Figure 3-1: Pin Assignment of CN1

Legend:

- ▶ U_CMMD: User Defines Command Mode
- ▶ Aln: Analog Input Channel n (single-ended)
- ▶ AIHn: Analog High Input Channel n (differential)
- ▶ AILn: Analog Low Input Channel n (differential)
- ▶ EXTTRG: External Trigger Signal or External CLK
- ▶ DI_n: Digital Input Signal Channel n
- ▶ DO_n: Digital Output Signal Channel n
- ▶ TGIN: External Digital Trigger or Hardware Gate
- ▶ TGOUT: Trigger/Gate Output Signal
- ▶ SSHO: SSH Output Signal
- ▶ DOSTB: Strobe Signal
- ▶ ADCHN_n: Multiplexer Control Line n
- ▶ ADGAIN2: External Gain Control Line
- ▶ A.GND: Analog Ground
- ▶ D.GND: Digital Ground

3.2 Analog Input Signal Connection

The PCI-9118/L provides 16 single-ended or 8 differential analog input channels. The analog signal can be converted to digital value by the A/D converter. To avoid ground loops and get more accuracy measurement of A/D conversion, it is quite important to understand the signal source type and how to choose the analog input modes: signal-ended and differential. The PCI-9118/L offers jumpers to select 16 single-ended or 8 different analog inputs.

Single-ended Mode

The single-ended mode has only one input relative to ground and it suitable for connecting with the floating signal source. The floatal source means it does not have any connection to ground. Figure 3.2 shows the single-ended connection. Note that when more

than two floating sources are connected, the sources must be with common ground.

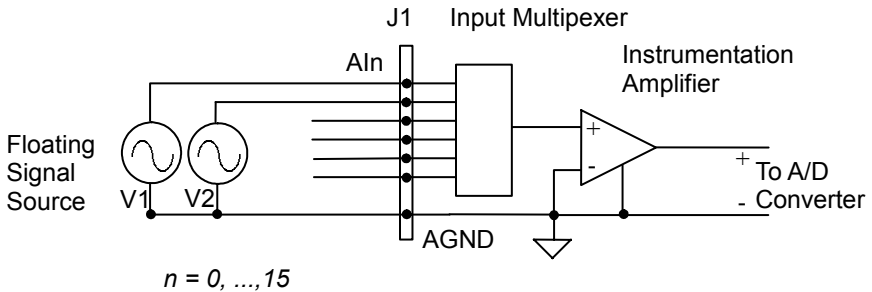


Figure 3-2: Floating source and single-ended

Differential input mode

The differential input mode provides two inputs that respond to the difference signal between them. If the signal source has one side connected to local ground, the differential mode can be used for reducing ground loop. Figure 3.3 shows the connection of the differential input mode. However, even if the signal source is local grounded, the single-ended still can be used when the V_{cm} (Common Mode Voltage) is very small and the effect of ground loop can be negated.

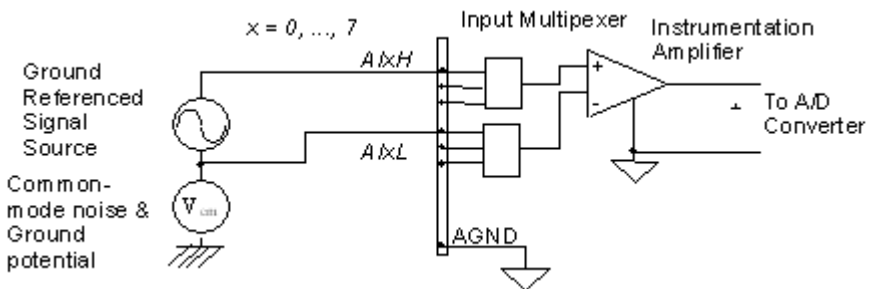


Figure 3-3: Ground-referenced source and differential input

If your signal source is both floating and local ground, you should use the differential mode, and the floating signal source should be connected as the Figure 3.4.

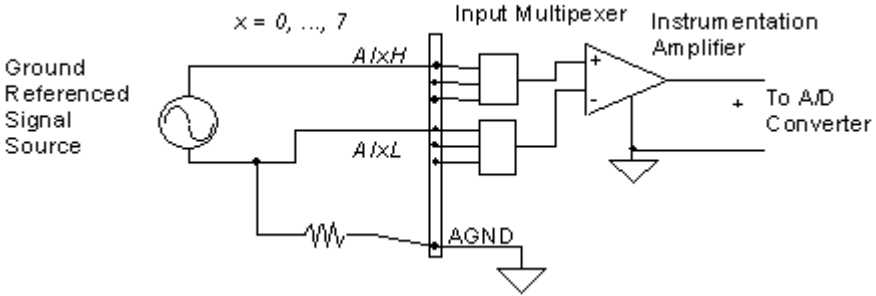


Figure 3-4: Floating source and differential input

3.3 Digital I/O Connection

The PCI-9118/L provides 4 digital input and 4 digital output channels on board. The digital I/O signal are fully TTL/DTL compatible. The detailed digital I/O signal specification can be referred in section 1.3.

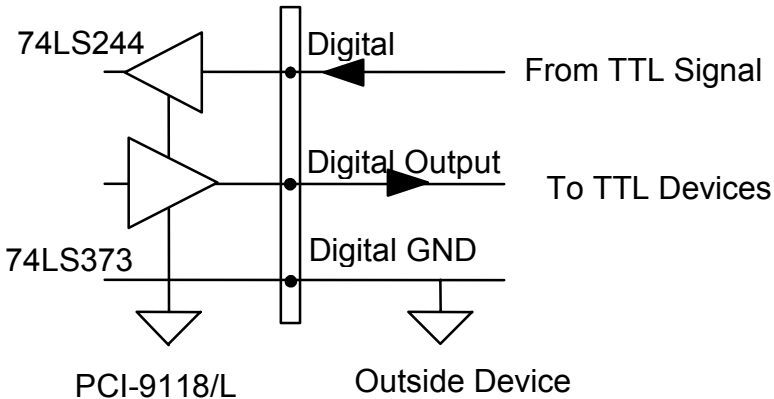


Figure 3-5: Digital I/O Connection

3.4 Timer / Counter Connection

The PCI-9118/L has an internal timer/counter 8254 on board. It offers 3 independent 16-bit programmable down counters; counter 1 and counter 2 are cascaded together for A/D timer pacer trigger of A/D conversion, and counter 0 is used as post counter by about-trigger mode and post-trigger mode. Figure 3.6 shows the 8254 timer/counter connection.

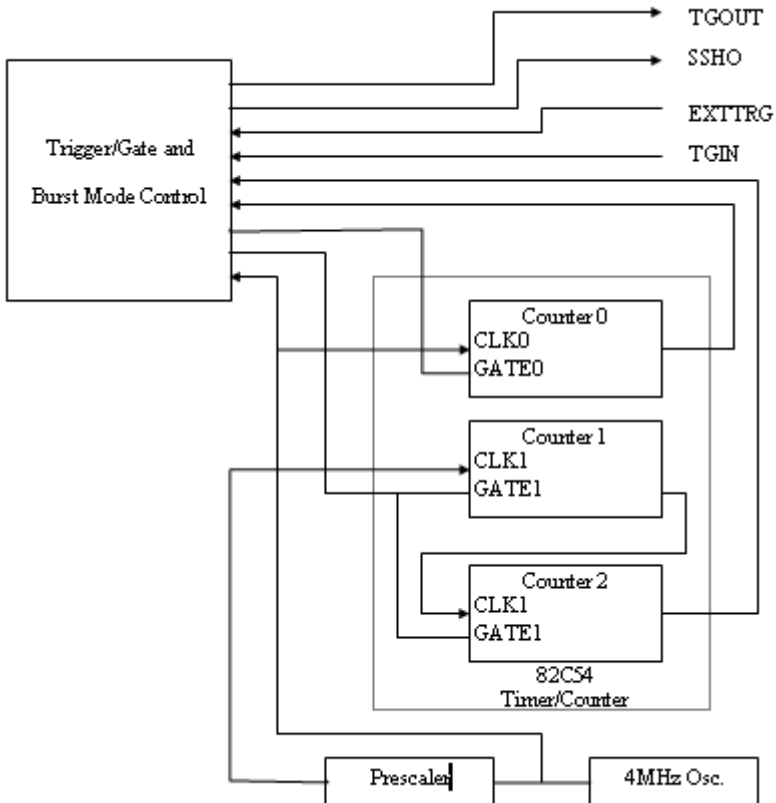


Figure 3-6: Block Diagram of 8254 Timer/Counter

The clock source of A/D conversion can be internal or external from EXTTRIG (pin44). The clock sources of counter1 and counter2 are internally fixed, while the gate can be controlled

externally by TRIN (pin46). All the timer/ counter signals are TTL compatible.

4 Registers Format

The detailed descriptions of the register format and structure of the PCI-9118DG/L, HG/L, HR/L are specified in this chapter. This information is quite useful for the programmer, who wishes to handle the card by low-level program.

In addition, the low level programming syntax is introduced. This information can help the beginners to operate the PCI-9118DG/L, HG/L, HR/L in the shortest learning time.

4.1 I/O Port Address

The PCI-9118DG/L, HG/L, HR/L functions as 32-bit PCI target device to any master on the PCI bus. It supports burst transfer to memory space by using 32-bit data. So, all data read and write will base on 32-bit data. The Table 4.1 shows the I/O address of each register with respect to the base address. The function of each register also be shown.

I/O Address	Read	Write
Base + 0x00	Counter 0	Counter 0
Base + 0x04	Counter 1	Counter 1
Base + 0x08	Counter 2	Counter 2
Base + 0x0C	-----	8254 Counter Control
Base + 0x10	A/D Data Reg.	-----
Base + 0x14	-----	-----
Base + 0x18	A/D Status Reg.	A/D Control Reg.
Base + 0x1C	Digital IN Reg.	Digital OUT Reg.
Base + 0x20	-----	Software Trigger
Base + 0x24	-----	A/D Gain/Channel Reg.
Base + 0x28	-----	A/D Burst No. Reg.
Base + 0x2C	-----	A/D Auto Scan Mode
Base + 0x30	-----	A/D Function Reg.
Base + 0x34	-----	A/D Data FIFO Reset
Base + 0x38	Interrupt Reason Reg.	Interrupt Control Reg.

Table 4-1: I/O Address

4.2 A/D Data Registers

The PCI-9118/L provides 16 single-ended or 8 differential A/D input channels, the digital data will store in the A/D data registers. The 12 bits A/D data is put into 32 bits registers.

- ▶ Address: BASE + 10
- ▶ Attribute: read only
- ▶ Data Format:

Bit	7	6	5	4	3	2	1	0
BASE+10	AD3	AD2	AD1	AD0	CH3	CH2	CH1	CH0
BASE+11	AD11	AD10	AD9	AD8	AD7	AD6	AD5	AD4
BASE+12	---	---	---	---	---	---	---	---
BASE+13	---	---	---	---	---	---	---	---

- ▷ AD11 .. AD0 : Analog to digital data. AD11 is the Most Significant Bit (MSB).AD0 is the Least Significant Bit (LSB).
- ▷ CH3 ~ CH0 : A/D channel number from which the data is derived.
- ▷ --- : Don't care

4.3 A/D control Register

This register is used to control the A/D mode. It's a write only register.

- ▶ Address: BASE + 18
- ▶ Attribute: write only
- ▶ Data Format:

Bit	7	6	5	4	3	2	1	0
Base + 18	UniP	Diff	SoftG	ExtG	ExtM	TmrTr	Int	Dma
Base + 19	---	---	---					
Base + 1A	---	---	---	---	---	---	---	---
Base + 1B	---	---	---	---	---	---	---	---

- ▷ UniP (Bit7) : Unipolar or Bipolar A/D input
 - 1: unipolar
 - 0: bipolar
- ▷ Diff (Bit6) :Differential or Single ended A/D input
 - 1: Differential End
 - 0: Single End
- ▷ SoftG(Bit5):Software Gate Control Output
 - 1: 8254 counter works
 - 0: 8254 counter stops
- ▷ ExtG(Bit4):External or Soft Gate Control Mode
 - 1: 8254 counter controlled by TGIN(connector pin 46)
 - 0: 8254 counter controlled by SoftG
- ▷ ExtM(Bit3):External Hardware Trigger mode
 - 1: External Hardware Trigger (connector pin44)
 - 0: Internal Hardware Trigger
- ▷ TmrTr(Bit2):Timer Trigger Mode
 - 1: 8254 Timer (Counter) is internal trigger source

- 0: Software Trigger is internal trigger source
- ▷ Int(Bit1):Interrupt Control Bit
 - 1: Enable Hardware interrupt
 - 0: Disable Hardware interrupt
- ▷ Dma(Bit0):A/D Data DMA Transfer Mode
 - 1: Enable A/D Data DMA Data Transfer
 - 0: Disable A/D Data DMA Data Transfer

4.4 A/D Status Register

- ▶ Address: BASE + 18
- ▶ Attribute: read only
- ▶ Data Format:

Bit	7	6	5	4	3	2	1	0
Base + 18	nHFull	NEpty	Acmp	DTH	Bover	ADOS	ADOR	ADrdy
Base + 19	---	---	---	---	---	---	---	nFull
Base + 1A	---	---	---	---	---	---	---	---
Base + 1B	---	---	---	---	---	---	---	---

- ▷ nFull (Bit8):A/D FIFO Full status (Fatal Error !)
0: FIFO Full
1: FIFO not Full
- ▷ nHFull(Bit7):A/D FIFO Half Full status
0: FIFO Half Full
1: FIFO not Half Full
- ▷ nEpty (Bit6):A/D FIFO Empty status
0: FIFO Empty
1: FIFO not Empty
- ▷ Acmp (Bit5):About Trigger Complete Status
1: About Trigger already complete
0: About Trigger not complete
- ▷ DTH (Bit4):External Digital Trigger Happened Status
1: External Digital Trigger ever Happened
0: External Digital Trigger not Happen
- ▷ Bover(Bit3):A/D Burst Mode Overrun Status (Fatal Error!)
1: Burst Mode Overrun
0: Burst Mode not Overrun
- ▷ ADOS(Bit2):A/D Over Speed Status (Warning!)

1: A/D Over Speed

0: A/D not Over Speed

▷ ADOR(Bit1):A/D Overrun Status (Fatal Error !)

1: A/D Overrun

0: A/D not Overrun

▷ ADrdy(Bit0):A/D ready status

1: A/D already ready

0: A/D not ready

4.5 Digital I/O register

There are 4 digital input channels and 4 digital output channels provided by the PCI-9118/L. The address Base + 1C is used to access digital inputs and control digital outputs.

- ▶ Address: BASE + 1C
- ▶ Attribute: read only
- ▶ Data Format:

Bit	7	6	5	4	3	2	1	0
Base + 1C	DO3	DO2	DO1	DO0	DI3	DI2	DI1	DI0
Base + 1D	---	---	---	---	---	---	---	---
Base + 1E	---	---	---	---	---	---	---	---
Base + 1F	---	---	---	---	---	---	---	---

- ▶ Address: BASE + 1C
- ▶ Attribute: write only
- ▶ Data Format:

Bit	7	6	5	4	3	2	1	0
Base + 1C	---	---	---	---	DO3	DO2	DO1	DO0
Base + 1D	---	---	---	---	---	---	---	---
Base + 1E	---	---	---	---	---	---	---	---
Base + 1F	---	---	---	---	---	---	---	---

4.6 Software Trigger Register

If you want to generate a trigger pulse to the PCI-9118/L for A/D conversion, you just write any data to this register, and then the A/D converter will be triggered.

- ▶ Address: BASE + 20
- ▶ Attribute: write only
- ▶ Data Format:

Bit	7	6	5	4	3	2	1	0
BASE+23~20	XX	XX	XX	XX	XX	XX	XX	XX

- ▷ XX: Don't care

4.7 Internal Timer/Counter Register

Two counters of 8254 are used for periodically triggering the A/D conversion, the left one is left free for user applications. The 8254 occupies 4 I/O address locations in the PCI-9118/L as shown blow. Users can refer to NEC's or Intel's data sheet for a full description of the 8254 features.

- ▶ Address: BASE + 0 ~ BASE + F
- ▶ Attribute: read / write
- ▶ Data Format:

Base + 0 Counter 0 Register (R/W)
 Base + 4 Counter 1 Register (R/W)
 Base + 8 Counter 2 Register (R/W)
 Base + C 8254 CONTROL BYTE (W)

4.8 A/D Gain/Channel Register

Address: BASE + 0x24

Attribute: write only

Data Format:

Bit	7	6	5	4	3	2	1	0
Base+0x24	CH7	CH6	CH5	CH4	CH3	CH2	CH1	CH0
Base+0x25	---	---	---	---	---	---	Gain1	Gain0
Base+0x26	---	---	---	---	---	---	---	---
Base+0x27	---	---	---	---	---	---	---	---

- ▷ CH7 ~ CH4 (bit7~ bit4): External A/D Channel selection bits
- ▷ CH3 ~ CH0 (bit3~ bit0): Internal A/D Channel selection bits
- ▷ Gain1~Gain0 (bit9~bit8): Gain selection bits

bits 9~8 (Gain1 Gain 0)			
11	10	01	00
1000/8	100/4	10/2	1

4.9 A/D Burst Number Register

- ▶ Address: BASE + 0x28
- ▶ Attribute: write only
- ▶ Data Format:

Bit	7	6	5	4	3	2	1	0
Base+0x28	Burst Number[7..0]							
Base+0x29	---	---	---	---	---	---	---	---
Base+0x2A	---	---	---	---	---	---	---	---
Base+0x2B	---	---	---	---	---	---	---	---

4.10 A/D Auto Scan Mode

- ▶ Address: BASE + 0x2C
- ▶ Attribute: write only
- ▶ Data Format:

Bit	7	6	5	4	3	2	1	0
Base+0x2C	---	---	---	---	---	---	ClrSet	BgnSet
Base+0x2D	---	---	---	---	---	---	---	---
Base+0x2E	---	---	---	---	---	---	---	---
Base+0x2F	---	---	---	---	---	---	---	---

BgnSet	ClrSet	Description
X	1	Clear A/D Channel/Gain Register
1	0	user can set A/D Channel/Gain Register
0	0	user cannot set A/D Channel/Gain Register

4.11 A/D Function Register

- ▶ Address: BASE + 0x30
- ▶ Attribute: write only
- ▶ Data Format:

Bit	7	6	5	4	3	2	1	0
Base+0x30	PDTrg	PETrg	BSSH	BM	BS	PM	AM	Start
Base+0x31	---	---	---	---	---	---	---	---
Base+0x32	---	---	---	---	---	---	---	---
Base+0x33	---	---	---	---	---	---	---	---

- ▷ PDTrg (bit7): Digital Trigger Positive/Negative Active
 - 1: Positive Trigger
 - 0: Negative Trigger

Note: Only “Positive Trigger” setting is valid for the trigger acquisition of PCI-9118/L.

- ▷ PETrg (bit6): External Trigger Positive/Negative Active
 - 1: Positive Trigger
 - 0: Negative Trigger
- ▷ BSSH (bit5): A/D Burst Mode Sample and Hold Control
 - 1: with Sample and Hold
 - 0: without Sample and hold
- ▷ BM (bit4): A/D Burst Mode Control
 - 1: Burst Mode
 - 0: Normal Mode
- ▷ BS (bit3): A/D Burst Start Control
 - 1: Burst Mode Start
 - 0: Burst Mode Stop

BM	BS	Description
0	X	A/D Normal Mode
1	0	Users can initialize 8254 for Burst Mode Control
1	1	Burst Mode Begin

- ▷ PM (bit 2):Post Trigger Mode
 - 1: Post Trigger
 - 0: Not Post Trigger
- ▷ AM (bit 1):About Trigger Mode
 - 1: About Trigger
 - 0: not About Trigger
- ▷ Start (bit 0):Trigger Start Control
 - 1: Trigger Start
 - 0: Trigger Stop

PM	AM	Start	Description
1	0	0	Post Trigger Mode ,user can initialize 8254 for setting trigger number
1	0	1	Post Trigger Mode Start
0	1	0	About Trigger Mode ,user can initialize 8254 for setting trigger number
0	1	1	About Mode Start
0	0	X	Trigger Mode Stop

4.12 A/D FIFO Reset Register

You can reset A/D FIFO by writing any value into this register

- ▶ Address: BASE + 0x34
- ▶ Attribute: write only
- ▶ Data Format:

Bit	7	6	5	4	3	2	1	0
Base+0x34	---	---	---	---	---	---	---	---
Base+0x35	---	---	---	---	---	---	---	---
Base+0x36	---	---	---	---	---	---	---	---
Base+0x37	---	---	---	---	---	---	---	---

4.13 Interrupt Control Register

- ▶ Address: BASE + 0x38
- ▶ Attribute: write only
- ▶ Data Format:

Bit	7	6	5	4	3	2	1	0
Base+0x38	---	---	---	---	Timer	About	Hfull	DTrg
Base+0x39	---	---	---	---	---	---	---	---
Base+0x3A	---	---	---	---	---	---	---	---
Base+0x3B	---	---	---	---	---	---	---	---

- ▷ Timer (bit3):Timer Interrupt Enable Control
 - 1: Enable
 - 0: Disable
- ▷ About (bit2):About Trigger Complete Interrupt Enable Control
 - 1: Enable
 - 0: Disable
- ▷ HFull (bit1):A/D FIFO Half Full Interrupt Enable Control
 - 1: Enable
 - 0: Disable
- ▷ DTrg (bit0):External Digital Trigger Interrupt Enable Control
 - 1: Enable
 - 0: Disable

4.14 Interrupt Status Register

- ▶ Address: BASE + 0x38
- ▶ Attribute: read only
- ▶ Data Format:

Bit	7	6	5	4	3	2	1	0
Base+0x38	---	---	---	---	Timer	About	Hfull	DTrg
Base+0x39	---	---	---	---	---	---	---	---
Base+0x3A	---	---	---	---	---	---	---	---
Base+0x3B	---	---	---	---	---	---	---	---

- ▷ Timer (bit3):Timer Interrupt index
 - 1: Interrupt Occur
 - 0: Interrupt not Occur
- ▷ About (bit2):About Trigger Complete Interrupt
 - 1: Interrupt Occur
 - 0: Interrupt not Occur
- ▷ HFull (bit1):A/D FIFO Half Full Interrupt index
 - 1: Interrupt Occur
 - 0: Interrupt not Occur
- ▷ DTrg (bit0):External Digital Trigger Interrupt index
 - 1: Interrupt Occur
 - 0: Interrupt not Occur

5 Operation Theorem

The operation theorem of the functions on PCI-9118DG/L, HG/L, HR/L cards is described in this chapter. The functions include the A/D conversion, D/A conversion, Digital I/O and counter / timer. The operation theorem can help you to understand how to manipulate or to program the PCI-9118DG/L, HG/L, HR/L.

5.1 A/D Conversion

Before programming PCI-9118DG/L, HG/L, HR/L to perform the A/D conversion, you should understand the following issues:

- ▶ A/D conversion procedure
- ▶ A/D trigger source and conversion modes
- ▶ A/D data transfer mode
- ▶ Trigger modes
- ▶ Specifying channels and gains in the Channel-Gain Queue

A/D Conversion Procedure

The A/D conversion is starting by a trigger source, then the A/D converter will start to convert the signal to a digital value. PCI-9118DG/L, HG/L, HR/L provides three trigger modes.

While A/D conversion, the ADrdy bit in A/D status register is cleared to indicate the data is not ready. After conversion being completed, the ADrdy bit will return to high(1) level. It means users can read the converted data from the A/D data registers. Please refer to section 4.4 for the A/D status register format.

The A/D data should be transferred into PC's memory for further use. The PCI-9118DG/L, HG/L, HR/L provides three data transfer modes that allow users to optimize the DAS system.

A/D Trigger Sources and conversion modes

In PCI-9118DG/L, HG/L, HR/L, A/D conversion can be triggered by the Internal or External trigger source. The ExtM bit of A/D control register is used to select the internal or external trigger, please refer to section 4.3 for the details. Whenever the external source is set, the internal sources are disabled.

If the internal trigger is selected, two trigger source, software trigger and the timer pacer trigger, can be used. The A/D trigger source is controlled by A/D mode bits (ExtM, TmrTr) of A/D control register (BASE+18). All of the three trigger sources are possible in the PCI-9118DG/L, HG/L, HR/L. In addition, for DMA operation, you can specify burst mode or burst mode with SSH (simultaneous sample-and-hold) to perform data conversion. The two modes are controlled by BM and BSSH bits of A/D Function Register (BASE+30). The different trigger and conversion conditions are specified as follows:

Software trigger

The trigger source is software controllable in this mode. That is, the A/D conversion is starting when any value is written into the software trigger register (BASE+20). This trigger mode is suitable for low speed A/D conversion. Under this mode, the timing of the A/D conversion is fully controlled under software. However, it is difficult to control the fixed A/D conversion rate except another timer interrupt service routine is used to generate a fixed rate trigger.

Timer Pacer Trigger

An on-board timer / counter chip 8254 is used to provide a trigger source for A/D conversion at a fixed rate. Two counters of the 8254 chip are cascaded together to generate trigger pulse with precise period. Please refer to section 5.3 for 8254 architecture. This mode is ideal for high speed A/D conversion. It can be combined with the DMA bus mastering or the interrupt data transfer. It's recommended to use this mode if your applications need a fixed and precise A/D sampling rate.

Burst Mode


Use burst mode if you want to accurately control the period between conversions of individual channels in a scan and the period between conversions of the entire scan. An on-board timer / counter chip 8254 is used to provide a trigger source for A/D conversion. Two counters of the 8254 chip are cascaded together. The burst conversion frequency is decided by the frequency divider of counter1 (c1) , i.e. the conversion rate is $4M/c1$.

The frequency of Pacer timer is decided by the frequency divider of counter1 and counter2 ($c1 \cdot c2$), i.e. the pacer clock rate is $4M / c1 \cdot c2$.

Note: The pacer rate can not be larger than the value of the burst conversion rate divided by the burst number. Hence, The number of scanned channels in the burst can't be larger than $c2$.

Burst Mode with SSH

Use burst mode with SSH if you want to accurately control both the period between conversions of the entire scan and if you want to simultaneously sample all channels in a scan. Each pulse from the pacer clock starts a simultaneous scan of all channels. The idea about pacer rate and conversion rate is the same as those of Burst Mode. However, One extra tick of the burst mode conversion clock is required to sample and hold the values. Therefore, the sample rate can be no more than the value of the burst mode conversion rate divided by the sum of one plus the number of channels in the burst. The difference between timer pacer mode, burst mode and burst mode with SSH is illustrated in the following figure:

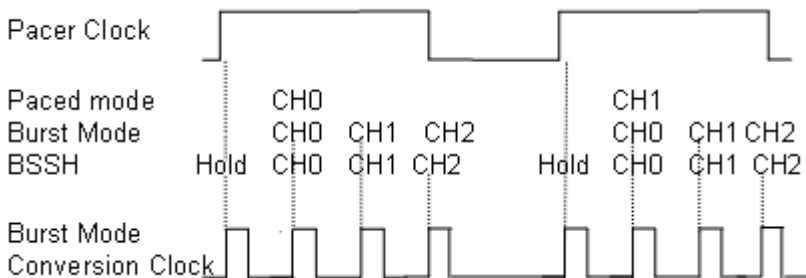

Note: The “HOLD” signal is sent to external S&H circuits to hold the analog signal. There must have an external circuits to carry out the S&H function, there is no on-board device with S&H.

External Trigger

Through the pin-44 of CN1 (ExtTrig), the A/D conversion also can be performed when a rising edge of external signal is occurred. The conversion rate of this mode is more flexible

than the previous two modes, because the users can handle the external signal by outside device. The external trigger can combine with the DMA transfer, interrupt data transfer, or even program polling data transfer. Generally, the interrupt data transfer is often used when external trigger mode is used.

A/D Data Transfer Modes

On the PCI-9118DG/L, HG/L, HR/L, three A/D data transfer modes can be used when the conversion is completed. The data transfer mode is controlled by the A/D mode control bits (Int, Dma) of the A/D control register (BASE+18). The different data transfer modes are specified as follows:

Software Data Transfer (ADrdy)

Usually, this mode is used with software A/D trigger mode. After the A/D conversion is triggered by software, the software should poll the ADrdy bit on the A/D Status register until it becomes to high level. Whenever the low byte of A/D data is read, the ADrdy bit will be cleared to indicate the data is read out.

It is possible to read A/D converted data without polling. The A/D conversion time will not excess 8fŸs on PCI-9118/L card. Hence, after software trigger, the software can wait for at least 8fŸs then read the A/D register without polling.

Interrupt Transfer (inX)

The PCI-9118/L provides hardware interrupt capability. Under this mode, an interrupt signal is generated when the A/D conversion is ended and the data is ready to be read. It is useful to combine the interrupt transfer with the timer pacer trigger mode. Under this mode, the data transfer is essentially asynchronous with the control software.

When the interrupt transfer is used, the hardware interrupt will be inserted and its corresponding ISR (Interrupt Service Routine) will be invoked and executed after A/D conversion is completed. The converted data is transferred by the ISR program. In PCI design, the IRQ level is assigned by BIOS directly.

DMA Transfer (Dma)

The DMA (Direct Memory Access) bus master allows data to be transferred directly between the PCI-9118/L and the PC memory at the fastest possible rate, without using any CPU time. The A/D data will be queue at local FIFO on the PCI-9118/L itself and it is automatically transferred to PC's memory.


The DMA transfer mode is very complex to program. It is recommended to use the high level program library to operate this card. If you wish to program the software which can handle the DMA bus master data transfer, please refer to more information about PCI controller.

Trigger Acquisition Modes

PCI-9118/L provides three types of trigger acquisition modes, pre-trigger, post-trigger and about-trigger. They are described in the following paragraph:


About-trigger

Use about-trigger acquisition in application where you want to collect data before and after a specific trigger event. The digital trigger is input from pin 46 (TGIN) on CN1. To set about trigger mode, set AM bit of A/D Function Register as '1' and specify the 8254 counter0 value. To start the about trigger acquisition, set Start bit of A/D Function Register as '1'. The operation stops when the specified number of samples has been acquired after digital trigger event occurs or DMAStop. The maximum counter0 number can be set is 64K, i.e. After trigger event occurs, the maximum number of data can be accessed is 64K.

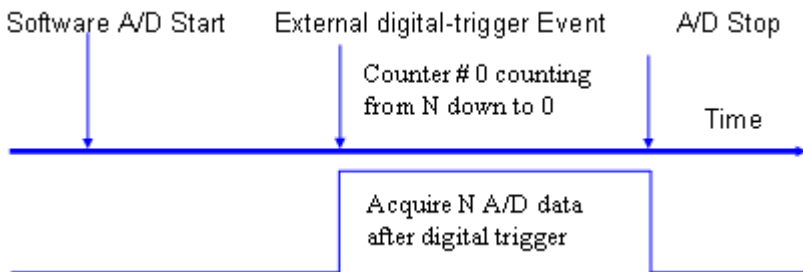


Pre-trigger

Use pre-trigger acquisition in application where you want to collect data before a specified trigger event. The trigger is a digital trigger which is input from pin 46 (TGIN) on CN1. To set pre-trigger mode, set AM bit of A/D Function Register as '1' and set 8254 counter0 value as 1. To start the pre-trigger, set Start bit of A/D Function Register as '1'. The operation stops after digital -trigger event occurs or DMAStop.

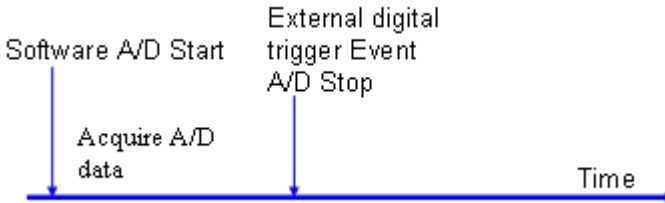

Post-trigger

Use post-trigger acquisition in application where you want to collect data after the start condition. To set post-trigger mode, set PM bit of A/D Function Register as '1' and set the 8254 counter0 value. To start the post-trigger, set Start bit of A/D Function Register as '1'. The operation stops after specified number of samples has been acquired or DMAStop. The maximum number of counter0 value can be set is 64K.

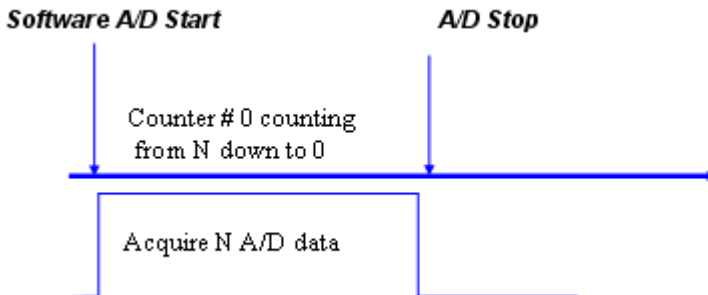

Specifying Channels and Gains in the Channel-Gain Queue

For analog input operation through interrupt and DMA mode, the channel and ranges you want to acquire samples can be specified in a hardware channel-gain queue. You can fill the channel number in the channel-gain queue in consecutive order or in nonconsecutive order. Therefore you can control the channel order for acquiring samples and the gain code for each channel. The maximum number of entries you can set is 255 channels. The channel order for acquiring is the same as the order you set in the channel-gain queue. When the specified channels are read from the first channel to the last channel, the channels in the queue are then sampled again until the specified number of samples is acquired. Please refer to section 6.2 to learn how to use 9118 library to set the channels and gains in the Channel-Gain Queue.

5.2 Digital Input and Output

To program digital I/O operation is fairly straight forward. The digital input operation is just to read data from the corresponding registers, and the digital output operation is to write data to the corresponding registers. The digital I/O registers' format are shown in section 4.6. Note that the DIO data channel can only be read or written in form of 16 bits together. It is impossible to access individual bit channel.

5.3 Timer/Counter Operation

The PCI-9118/L has an interval timer/counter 8254 on board. Refer to section 3.5 for the signal connection and the configuration of the counters.

The 8254 Timer / Counter Chip

The Intel (NEC) 8254 contains three independent, programmable, multi-mode 16 bit counter/timers. The three independent 16 bit counters can be clocked at rates from DC to 5 MHz. Each counter can be individually programmed with 6 different operating modes by appropriately formatted control words. The most commonly uses for the 8254 in microprocessor based system are:

- ▶ programmable baud rate generator
- ▶ event counter
- ▶ binary rate multiplier
- ▶ real-time clock
- ▶ digital one-shot
- ▶ motor control

But these three counters are used internally by PCI-9118/L already. There is not a free counter available for general purpose usage. If your application needs to count events or measure frequency, you may consider our PCI-8554 timer/counter card of the details for this card, please visit our website at: <http://www.adlink.com.tw> and for more information about the 8254, please refer to the NEC Microprocessors and peripherals or Intel Microsystems Components Handbook.

Pacer Trigger Source

The counter 1 and counter 2 are cascaded together to generate the timer pacer trigger of A/D conversion. The frequency of the pacer trigger is software controllable. The maximum pacer signal rate is $4\text{MHz}/4=1000\text{K}$ which exceeds the maximum A/D conversion rate of the PCI-9118/L. The minimum signal rate is $4\text{MHz}/65536/65536$, which is a very slow frequency that user may never use it.

Post Counter for About-trigger

The counter0 is used as a post counter. PCI-9118/L provides several acquisition trigger mode. In these trigger modes, about-trigger and post trigger need this counter to count for a specified amount of data that behind the trigger signal. Counter0 is a 16-bit down counter. So, the maximum amount of data that can be acquired after the trigger signal is limited to 64K samples.

I/O Address

The 8254 in the PCI-9118/L occupies 4 I/O address as shown below.

BASE + 0x0	LSB OR MSB OF COUNTER 0
BASE + 0x4	LSB OR MSB OF COUNTER 1

BASE + 0x8	LSB OR MSB OF COUNTER 2
BASE + 0xC	CONTROL BYTE

The programming of 8254 is control by the registers BASE+0 to BASE+C. The functionality of each register is specified this section. For more detailed information, please refer handbook of 8254 chip.

Control Byte

Before loading or reading any of these individual counters, the control byte (BASE+C) must be loaded first. The format of the control byte is :

Bit	7	6	5	4	3	2	1	0
	SC1	SC0	RL1	RL0	M2	M1	M0	BCD

SC1 & SC0 - Select Counter (Bit7 & Bit 6)

SC1	SC0	COUNTER
0	0	Select Counter 0
0	1	Select Counter 1
1	0	Select Counter 2
1	1	ILLEGAL

RL1 & RL0 - Select Read/Load operation (Bit 5 & Bit 4)

RL1	RL0	OPERATION
0	0	COUNTER LATCH FOR STABLE READ
0	1	READ/LOAD LSB ONLY
1	0	READ/LOAD MSB ONLY
1	1	READ/LOAD LSB FIRST, THEN MSB

M2, M1 & M0 - Select Operating Mode (Bit 3, Bit 2, & Bit 1)

M2	M1	M0	MODE
0	0	0	0
0	0	1	1
x	1	0	2
x	1	1	3
1	0	0	4
1	0	1	5

BCD - Select Binary/BCD Counting (Bit 0)

0	16-BITS BINARY COUNTER
1	BINARY CODED DECIMAL (BCD) COUNTER (4 DIGITAL)

Note The count of the binary counter is from 0 up to 65,535 and the count of the BCD counter is from 0 up to 9,999

Mode Definitions

In 8254, six operating modes can be selected:

- ▶ Mode 0 : Interrupt on Terminal Count
- ▶ Mode 1 : Programmable One-Shot
- ▶ Mode 2 : Rate Generator
- ▶ Mode 3 : Square Wave Rate Generator
- ▶ Mode 4 : Software Triggered Strobe
- ▶ Mode 5 : Hardware Triggered Strobe

All detailed description of these six modes are written in Intel Microsystems Components Handbook Volume II Peripherals.

6 C/C++ Library

This chapter describes the software library for operating this card. Only the functions in DOS library and Windows 95 DLL are described. Please refer to the PCIS-DASK function reference manual, which included in ADLINK CD, for the descriptions of the Windows 98/NT/2000/XP DLL functions.

The function prototypes and some useful constants are defined in the header files LIB directory (DOS) and INCLUDE directory (Windows 95). For Windows 95 DLL, the developing environment can be Visual Basic 4.0 or above, Visual C/C++ 4.0 or above, Borland C++ 5.0 or above, Borland Delphi 2.x (32-bit) or above, or any Windows programming language that allows calls to a DLL. It provides the C/C++, VB, and Delphi included files.

6.1 Libraries Installation

Please refer to the "Software Installation Guide" for the detail information about how to install the software libraries for DOS, or Windows 95 DLL, or PCIS-DASK for Windows 98/NT/2000/XP.

The device drivers and DLL functions of Windows 98/NT/2000/XP are included in the PCIS-DASK. Please refer the PCIS-DASK user's guide and function reference, which included in the ADLINK CD, for detailed programming information.

6.2 Programming Guide

Naming Convention

The functions of the NuDAQ PCI cards or NuIPC CompactPCI cards software driver are using full-names to represent the functions' real meaning. The naming convention rules are:

In a DOS Environment:

```
_ {hardware_model} _ {action_name}. e.g.  
_9118_initial().
```

In order to recognize the difference between DOS library and Windows 95 library, a capital "W" is put on the head of each function name of the Windows 95 DLL driver. e.g. W_9118_Initial().

Data Types

We defined some data type in Pci_9118.h (DOS) and Acl_pci.h (Windows 95). These data types are used by NuDAQ Cards" library. We suggest you to use these data types in your application programs. The following table shows the data type names and their range.

Type Name	Description	Range
U8	8-bit ASCII character	0 to 255
I16	16-bit signed integer	-32768 to 32767
U16	16-bit unsigned integer	0 to 65535
I32	32-bit signed integer	-2147483648 to 2147483647
U32	32-bit single-precision floating-point	0 to 4294967295
F32	32-bit single-precision floating-point	-3.402823E38 to 3.402823E38
F64	64-bit double-precision floating-point	-1.797683134862315E308 to 1.797683134862315E309
Boolean	Boolean logic value	TRUE, FALSE

6.3 _9118_Initial

@ Description

This function is used to initialize PCI-9118/L. Every PCI-9118/L has to be initialized by this function before calling other functions.

@ Syntax

C/C++ (DOS)

```
int _9118_Initial (I16 cardNo, I16 *base_address,  
                 I16 *irq_no )
```

C/C++ (Windows 95)

```
int W_9118_Initial (int cardNo, U16  
                  *base_address1, U16 *base_address2, U8  
                  *irq_no, U8 *pci_master)
```

Visual Basic (Windows 95)

```
W_9118_Initial (ByVal cardNo As Long, base_add1  
               As Long, base_add2 As Long, irq_no As Byte,  
               pci_master As Byte) As Long
```

@ Argument

cardNo: the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2, PCI_CARD12.

base_address (DOS): the I/O port base address of the card, it is assigned by system BIOS

op_base_address (Win-95): the physical location of S5933 operation Registers in I/O space.

pt_base_address (Win-95): the physical location of add-on registers in pass-through I/O space. (This argument is the same as base_address of DOS version)

irq_no: the interrupt IRQ level of your PCI-9118/L card, this available irq value is automatically assigned by system BIOS.

pci_master: BIOS enables or disables bus mastering in PCI Command Register

@ Return Code

```
ERR_NoError  
ERR_PCIBiosNotExist  
ERR_PCICardNotExist  
ERR_PCIIrqNotExist
```

6.4 _9118_Switch_Card_No

@ Description

This function is used on multi-cards system. After the PCI-9118/L cards are initialized by _9118_Initial function, you can use this function to select which one you want to operate. This function is only supported by DOS version.

@ Syntax

C/C++ (DOS)

```
int _9118_Switch_Card_No( int cardNo)
```

@ Argument

cardNo: the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

@ Return Code

```
ERR_NoError, ERR_BoardNoInit
```

6.5 _9118_DI

@ Description

This function is used to read data from digital input port. There are 4 digital input channels on PCI-9118/L. The all 4 bits can be accessed by this function directly.

@ Syntax

C/C++ (DOS)

```
int _9118_DI (unsigned int far *data )
```

C/C++ (Windows 95)

```
int W_9118_DI(U16 cardNo, unsigned int *data )
```

Visual Basic (Windows 95)

```
W_9118_DI (ByVal cardNo As Integer, data As Long)  
As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2, ..., PCI_CARD12.

data: the 4-bit data read from digital port.

@ Return Code

```
ERR_NoError, ERR_BoardNoInit
```

6.6 _9118_DI_Channel

@ Description

This function is used to read data from digital input ports. There are 4 digital input channels on PCI-9118/L. When performing this function, the digital input port is read and the value of the corresponding channel is returned.

@ Syntax

C/C++ (DOS)

```
int _9118_DI_Channel (I16 di_ch_no , unsigned int  
                    far *data )
```

C/C++ (Windows 95)

```
int W_9118_DI_Channel(U16 cardNo, I16 di_ch_no ,  
                     U16 *data )
```

Visual Basic (Windows 95)

```
W_9118_DI_Channel (ByVal cardNo As Integer, ByVal  
                  di_ch_no As Long, data As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

di_ch_no: the DI channel number, the valid channel value is from 0 to 3

data :the returned data, either 0 or 1.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit  
ERR_InvalidDIChannel
```

6.7 _9118_DO

@ Description

This function is used to write data to digital output port. There are 4 output channels on the PCI-9118/L.

@ Syntax

C/C++ (DOS)

```
int _9118_DO (unsigned int data)
```

C/C++ (Windows 95)

```
int W_9118_DO (U16 cardNo, U16 data)
```

Visual Basic (Windows 95)

```
W_9118_DO (ByVal cardNo As Integer, ByVal data As  
Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

data: the data written to output port.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.8 _9118_AD_Reset_AFIFO

@ Description

This function is used to reset A/D Channel/Gain Register. Before calling `_9118_AD_Set_GainChn` (refer to section 6.2.14) to set A/D channel and input range, you have to perform this function to clear A/D Channel/Gain Register.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Reset_AFIFO()
```

C/C++ (Windows 95)

```
int W_9118_AD_Reset_AFIFO(U16 cardNo)
```

Visual Basic (Windows 95)

```
W_9118_AD_Reset_AFIFO (ByVal cardNo As Integer)  
As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.9 _9118_AD_Bgnset_AFIFO

@ Description

Users can not set the A/D channel and input range unless this function is executed. Therefore after this function is performed, the program can start to fill out A/D Channel/Gain register to set the A/D channel and range.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Bgnset_AFIFO()
```

C/C++ (Windows 95)

```
int W_9118_AD_Bgnset_AFIFO(U16 cardNo)
```

Visual Basic (Windows 95)

```
W_9118_AD_Bgnset_AFIFO (ByVal cardNo As Integer)  
As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.10 _9118_AD_Endset_AFIFO

@ Description

This function is used to stop setting A/D channel and input range.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Endset_AFIFO()
```

C/C++ (Windows 95)

```
int W_9118_AD_Endset_AFIFO(U16 cardNo)
```

Visual Basic (Windows 95)

```
W_9118_AD_Endset_AFIFO (ByVal cardNo As Integer)  
As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.11 _9118_AD_Reset_DFIFO

@ Description

This function is used to reset A/D Data FIFO.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Reset_DFIFO()
```

C/C++ (DOS)

```
int W_9118_AD_Reset_DFIFO(U16 cardNo)
```

Visual Basic (Windows 95)

```
W_9118_AD_Reset_DFIFO (ByVal cardNo As Integer)  
As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2, ..., PCI_CARD12.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.12 _9118_AD_Set_Burst_No

@ Description

If the A/D conversion mode is set as burst mode, this function is used to set the number of conversion channels in a scan trigger.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_Burst_No(int BurstNo)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_Burst_No(U16 cardNo, int  
    BurstNo)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_Burst_No (ByVal cardNo As Long,  
    ByVal BurstNo As Integer) As Long
```

@ Argument

cardNo (Win-95) :the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2, ..., PCI_CARD12.

BurstNo:the burst number.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.13 _9118_INT_Set_CtrlReg

@ Description

This function is used to set Interrupt Control Register. The definition of each bit of “CtrlVal” is as follows:

Bit	7	6	5	4	3	2	1	0
	--	--	--	--	Timer	About	Hfull	DTrg

@ Syntax

C/C++ (DOS)

```
int _9118_INT_Set_CtrlReg (int CtrlVal)
```

C/C++ (Windows 95)

```
int W_9118_INT_Set_CtrlReg(U16 cardNo, int CtrlVal)
```

Visual Basic (Windows 95)

```
W_9118_INT_Set_CtrlReg (ByVal cardNo As Long, ByVal CtrlVal As Integer) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2, ..., PCI_CARD12.

CtrlVal: the value written to Interrupt Control Register.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.14 _9118_AD_Set_GainChn

@ Description

This function is used to specify the A/D channel and input range.

Note: `_9118_AD_Bgnset_AFIFO` should be called before you use this function to set the channels and gains in the Channel-Gain Queue. After channel setting is finished, you have to call `_9118_AD_Endset_AFIFO` to stop filling out the Channel-Gain Queue. The sequence to call these three functions is:

```

_9118_AD_Bgnset_AFIFO();
_9118_AD_Set_GainChn(ch, gain);
      :
      :
_9118_AD_Set_GainChn(ch, gain);
_9118_AD_Endset_AFIFO();

```

} Sets A/D channels and gains

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_GainChn (int ch, int gain )
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_GainChn(U16 cardNo, int ch, int gain)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_GainChn (ByVal cardNo As Integer,
    ByVal ch As Long, ByVal gain As Long) As
    Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

ch: the channel on which perform. operation, the valid value is within 0 to 15.

gain: the A/D input range, the possible values are listed in the column "AD_INPUT" of the following table.

9118DG/L, HR/L

AD_INPUT	GAIN	Input Type (Bipolar or Unipolar)	Input Range
AD_B_5_V	1	Bipolar	„b5V
AD_B_2_5_V	2	Bipolar	„b2.5V
AD_B_1_25_V	4	Bipolar	„b1.25V
AD_B_0_625_V	8	Bipolar	„b0.625V
AD_U_10_V	1	Unipolar	0V ~ 10V
AD_U_5_V	2	Unipolar	0V ~ 5V
AD_U_2_5_V	4	Unipolar	0V ~ 2.5V
AD_U_1_25_V	8	Unipolar	0V ~ 1.25V

9118HG/L

AD_INPUT	GAIN	Input Type (Bipolar or Unipolar)	Input Range
AD_B_5_V	1	Bipolar	„b5V
AD_B_0_5_V	10	Bipolar	„b0.5V
AD_B_0_05_V	100	Bipolar	„b0.05V
AD_B_0_005_V	1000	Bipolar	„b0.005V
AD_U_10_V	1	Unipolar	0V ~ 10V
AD_U_1_V	10	Unipolar	0V ~ 1V
AD_U_0_1_V	100	Unipolar	0V ~ 0.1V
AD_U_0_01_V	1000	Unipolar	0V ~ 0.01V

@ Return Code

```

ERR_NoError
ERR_InvalidADChannel
ERR_BoardNoInit
ERR_InvalidADGain
  
```

6.15 _9118_AD_Set_Scan

@ Description

This function is used to set the first and last channels in a group of consecutive channels. This function can specify a group of consecutive channels for analog input through DMA and interrupt operation. The sequence of channel scanned is start, start+1, start+2, ..., end.

@ Syntax

C/C++ (DOS)

```
Int _9118_AD_Set_Scan(int start, int end, int  
gain )
```

C/C++ (Windows 95)

```
Int W_9118_AD_Set_Scan(U16 cardNo, int start, int  
end, int gain )
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_Scan (ByVal cardNo As Integer,  
ByVal start As Long, ByVal end As Long,  
ByVal gain As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2, ..., PCI_CARD12.

ch: the channel on which perform

start: the First channel number in a group of consecutive channels, the valid value is 0 to 15.

end: the last channel number in a group of consecutive channels, the valid value is 0 to 15.

gain: the A/D input range, the possible values are listed in the column "AD_INPUT" of the following table.

@ Return Code

```
ERR_NoError  
ERR_AD_InvalidChannel
```

ERR_BoardNoInit
ERR_InvalidADGain

6.16 _9118_AD_Soft_Trig

@ Description

This function is used to trigger the A/D conversion by software. This function generates a trigger pulse to PCI-9118/L for A/D conversion and the converted data will be stored in A/D data register.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Soft_Trig ()
```

C/C++ (Windows 95)

```
int W_9118_AD_Soft_Trig (U16 cardNo)
```

Visual Basic (Windows 95)

```
W_9118_AD_Soft_Trig (ByVal cardNo As Integer) As  
Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.17 _9118_AD_Set_Unip

@ Description

This function is used to set analog input range as uni-polar or bi-polar. The default setting is bi-polar.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_Unip (int Unip)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_Unip(U16 cardNo, int Unip)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_Unip (ByVal cardNo As Integer,  
ByVal Unip As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

Unip: 0: bi-polar

1: uni-polar

@ Return Code

ERR_NoError

ERR_BoardNoInit

6.18 _9118_AD_Set_Diff

@ Description

This function is used to set analog input mode as differential or single-ended.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_Diff (int Diff)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_Diff (int Diff)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_Diff (ByVal cardNo As Integer,  
    ByVal Diff As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

Diff: 0: single-ended

1: differential

@ Return Code

ERR_NoError

ERR_BoardNoInit

6.19 _9118_AD_Set_SoftG

@ Description

This function is used to specify the status of software Gate, i.e. it controls 8254 counter to work or stop.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_SoftG (int SoftG)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_SoftG(U16 cardNo, int SoftG)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_SoftG (ByVal cardNo As Integer,  
ByVal SoftG As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

softG: 1: 8254 counter works

0: 8254 counter stops

@ Return Code

```
ERR_NoError
```

```
ERR_BoardNoInit
```

6.20 _9118_AD_Set_ExtG

@ Description

This function is used to specify the A/D control as External Gate control mode or Software Gate Control mode.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_ExtG (int ExtG)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_ExtG(U16 cardNo, int ExtG)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_ExtG (ByVal cardNo As Integer,  
ByVal ExtG As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

ExtG: 1: 8254 counter controlled by TGIN (connector pin 46)

0: 8254 counter controlled by Soft Gate

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.21 _9118_AD_Set_ExtM

@ Description

This function is used to specify the hardware trigger source.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_ExtM (int ExtM)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_ExtM(U16 cardNo, int ExtM)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_ExtM (ByVal cardNo As Integer,  
ByVal ExtM As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

ExtM: 1: External Hardware Trigger (connector pin 44).

0: Internal Hardware Trigger.

@ Return Code

ERR_NoError

ERR_BoardNoInit

6.22 _9118_AD_Set_TmrTr

@ Description

This function is used to specify the internal trigger source.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_TmrTr (int TmrTr)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_TmrTr (U16 cardNo, int TmrTr)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_TmrTr (ByVal cardNo As Integer,  
ByVal TmrTr As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

TmrTr: 1: 8254 Timer (Counter) is internal trigger source.

0: Software Trigger is internal trigger source.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.23 _9118_AD_Set_Int

@ Description

This function is used to specify the status of interrupt operation. To enable hardware interrupt, "Int" should be set as 1; otherwise the interrupt operation can not be performed.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_Int (int Int)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_Int(U16 cardNo, int Int)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_Int (ByVal cardNo As Integer, ByVal  
Int As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

Int: 1: Enable Hardware interrupt.

0: Disable Hardware interrupt.

@ Return Code

```
ERR_NoError
```

```
ERR_BoardNoInit
```

6.24 _9118_AD_Set_Dma

@ Description

This function is used to specify the status of DMA transfer mode. To enable DMA Transfer operation, "Dma" should be set as 1; otherwise the DMA operation will not be performed.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_Dma (int Dma)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_Dma(U16 cardNo, int Dma)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_Dma (ByVal cardNo As Integer, ByVal  
Dma As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

Dma: 1: Enable A/D Data DMA Transfer Mode.

0: Disable A/D Data DMA Transfer Mode.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.25 _9118_AD_Set_CtrlReg

@ Description

This function is used to set the Analog output mode by writing 8 bits data into A/D control register. This function can be used to reset A/D Control Register to default value by setting "CtrlVal" as 0, i.e. the A/D mode is set as bi-polar, single-ended and software trigger). The definition of each bit of "CtrlVal" is as follows:

Bit	7	6	5	4	3	2	1	0
	UniP	Diff	SoftG	ExtG	ExtM	TmrTr	Int	Dma

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_CtrlReg(int CtrlVal)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_CtrlReg(U16 cardNo, int CtrlVal)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_CtrlReg (ByVal cardNo As Integer, ByVal CtrlVal As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2, ..., PCI_CARD12.

ctrlVal1: the value written to A/D control register

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.26 _9118_AD_Set_PDTrg

@ Description

This function is used to set the active type of digital trigger.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_PDTrg(int PDTrg)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_PDTrg(U16 cardNo, int PDTrg)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_PDTrg (ByVal cardNo As Integer,  
    ByVal PDTrg As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

PDTrg: 0: Negative Trigger.

1: Positive Trigger.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.27 _9118_AD_Set_PETrg

@ Description

This function is used to set the active type of external trigger.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_PETrg(int PETrg)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_PETrg(U16 cardNo, int PETrg)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_PETrg (ByVal cardNo As Integer,  
ByVal PETrg As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

PETrg: 0: Negative Trigger.

1: Positive Trigger.

@ Return Code

ERR_NoError

ERR_BoardNoInit

6.28 _9118_AD_Set_BSSH

@ Description

This function is used to enable and disable A/D Burst Mode with Sample and Hold.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_BSSH (int BSSH)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_BSSH(U16 cardNo, int BSSH)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_BSSH (ByVal cardNo As Integer,  
ByVal BSSH As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

BSSH: 0: without Sample and Hold.

1: with Sample and Hold.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.29 _9118_AD_Set_BM

@ Description

This function is used to enable and disable A/D Burst Mode.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_BM (int BM)
```

C/C++ (Win95)

```
int W_9118_AD_Set_BM(U16 cardNo, int BM)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_BM (ByVal cardNo As Integer, ByVal  
BM As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2, ..., PCI_CARD12.

BM: 0: Normal Mode.

1: Burst Mode.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.30 _9118_AD_Set_BS

@ Description

This function is used to start and stop A/D Burst Mode.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_BS (int BS)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_BS (U16 cardNo, int BS)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_BS (ByVal cardNo As Integer, ByVal  
BS As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

BS: 0: stops Burst Mode.

1: starts Burst Mode.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.31 _9118_AD_Set_PM

@ Description

This function is used to enable and disable Post Trigger Mode.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_PM (int PM)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_PM(U16 cardNo, int PM)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_PM (ByVal cardNo As Integer, ByVal  
PM As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2, ..., PCI_CARD12.

PM: 0: Disable Post Trigger.

1: Enable Post Trigger.

@ Return Code

```
ERR_NoError
```

```
ERR_BoardNoInit
```

6.32 _9118_AD_Set_AM

@ Description

This function is used to enable and disable About Trigger Mode.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_AM (int AM)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_AM(U16 cardNo, int AM)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_AM (ByVal cardNo As Integer, ByVal  
AM As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

AM 0: Disable About Trigger.

1: Enable About Trigger.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.33 _9118_AD_Set_Start

@ Description

This function is used to start or stop Trigger. After the trigger mode (post-trigger or about trigger) is selected, the program should call this function to start trigger.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_Start (int Start)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_Start(U16 cardNo, int Start)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_Start (ByVal cardNo As Integer,  
ByVal Start As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

Start: 0: Trigger Stop.

1: Trigger Start.

@ Return Code

```
ERR_NoError, ERR_BoardNoInit
```

6.34 _9118_AD_Set_FuncVal

@ Description

This function is used to set A/D trigger mode by writing data into A/D Function Register. The definition of each bit is as follows:

Bit	7	6	5	4	3	2	1	0
	PDTrg	PETrg	BSSH	BM	BS	PM	AM	Start

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Set_FuncReg (int FuncVal)
```

C/C++ (Windows 95)

```
int W_9118_AD_Set_FuncReg(U16 cardNo, int
    FuncVal)
```

Visual Basic (Windows 95)

```
W_9118_AD_Set_FuncReg (ByVal cardNo As Integer,
    ByVal FuncVal As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., CI_CARD12.

FuncVal: the value written to A/D Function Register.

@ Return Code

```
ERR_NoError
ERR_BoardNoInit
```

6.35 _9118_AD_Aquire

@ Description

This function is used to poll the A/D conversion data. It will trigger the A/D conversion, and read the A/D data when the data is ready ('data ready' bit becomes low). The value of converted A/D data is from 0 to 4095 (for 9118HG/L, DG/L) or -32768 to 32767(for 9118HR/L).

@ Syntax

C/C++ (DOS)

```
int _9118_AD_Aquire ( int far *ad_data )
```

C/C++ (Windows 95)

```
int W_9118_AD_Aquire(U16 cardNo, I16 *ad_data )
```

Visual Basic (Windows 95)

```
W_9118_AD_Aquire (ByVal cardNo As Integer,  
ad_data As Integer) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2, ..., PCI_CARD12.

ad_data: A/D converted value for PCI-9118DG/L, HG/L, the lowest 4 bits represents the converted channel number and the higher 12 bits is the converted A/D data.

Bit 0 ~ Bit 3: the converted channel number

Bit 4 ~ Bit 15: the converted A/D data

For PCI-9118HR/L, all the 16 bits are the converted A/D data.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit  
ERR_AD_AquireTimeOut
```

6.36 _9118_AD_DMA_Start

@ Description

This function will perform A/D conversion N times with DMA data transfer by using the pacer trigger (internal timer trigger). It takes place in the background which will not stop until the N-th conversion has been completed or your program execute `_9118_AD_DMA_Stop()` function to stop the process. The function is performed on single A/D channel when the A/D channel auto-scan is set as FALSE. If the A/D channel auto-scan is TRUE, the conversion will be multiple channels by sequence.

After executing this function, it is necessary to check the status of the operation by using the function `_9118_AD_DMA_Status()`. The value of converted A/D data is from 0 to 4095 (9118DG/L, HG/L) or from -32768 to 32767 (9118HR/L).

@ Syntax

C/C++ (DOS)

```
int _9118_AD_DMA_Start(int clk_src, unsigned int
    count , unsigned long *ad_buffer , int c1 ,
    int c2 )
```

C/C++ (Windows 95)

```
int W_9118_AD_DMA_Start(U16 cardNo, int clk_src,
    unsigned int count , HANDLE memID, int c1,
    int c2 )
```

Visual Basic (Windows 95)

```
W_9118_AD_DMA_Start (ByVal cardNo As Integer,
    ByVal clk_src As Long, ByVal count As Long,
    ByVal handle As Long, ByVal c1 As Long,
    ByVal c2 As Long) As Long
```

@ Argument


cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

clk_src: the clock source for the timer trigger of AD conversion. The valid clock sources are: A_9118_AD_IntSrc, A_9118_AD_ExtSrc

count: the number of A/D conversion in samples.

ad_buffer (DOS): the start address of the memory buffer to store the A/D data, the buffer size must large than the numbers of A/D conversion. This memory should be double-word alignment.

ad_buffer is a 32-bit data buffer, but the A/D data is 16-bit format. For PCI-9118/L, the data format of ad_buffer is as follows:



Every 16-bit data:

D11 D10 D9 D1 D0 C3 C2 C1 C0

Where D11, D10, .., D0: A/D converted data

C3, C2, C1, C0: converted channel no (for 9118DG/L, HG/L)

D15, D14, .., D0: A/D converted data (for 9118HR/L)

Please refer to the sample program, ad_demo3.c, included in the software library CD we provide to get the idea how to get each data sampled (16-bit).

memID (Win-95): the memory ID of the allocated system AI memory. In Windows 95 environment, before calling W_9118_AD_DMA_Start, W_9118_Alloc_AI_Mem must be called to allocate a contiguous AI memory. W_9118_Alloc_AI_Mem will return a memory ID for identify the allocated AI memory, as well as the linear address of the AI memory for user to access the data. The format of the A/D data is the same as DOS buffer (ad_buff argument).

Note: After the DMA operation stops, the data stored in ad_buffer or stored in the memory space allocated by memID are the last count transferred data, where count is the value of argument count. Thus, for post trigger mode and about trigger mode, the value of count should be larger than the value of post_trig_cnt set in W_9118_AD_Trig to get the all the data transferred during Timer#0 counts down.

c1: the 16-bit timer frequency divider of timer channel #1

c2: the 16-bit timer frequency divider of timer channel #2

Note: the A/D sampling rate is equal to $4\text{MHz} / (c1 * c2)$.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit  
ERR_InvalidADChannel  
ERR_InvalidTimerValue  
ERR_AD_InvalidGain
```

6.37 _9118_AD_DMA_Status

@ Description

Since the _9118_AD_DMA_Start() function executes in background, you can issue this function to check its operation status.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_DMA_Status ( int *status , int  
                        *count )
```

C/C++ (Windows 95)

```
int W_9118_AD_DMA_Status(U16 cardNo, int *status  
                        , int *count )
```

Visual Basic (Windows 95)

```
W_9118_AD_DMA_Status (ByVal cardNo As Integer,  
                      status As Long, count As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

status: status of the DMA data transfer

0: AD_DMA_STOP : DMA is completed.

1: AD_DMA_RUN : DMA is not completed.

count: the number of A/D data which has been transferred.

@ Return Code

```
ERR_NoError  
ERR_AD_DMANotSet  
ERR_BoardNoInit
```

6.38 _9118_AD_DMA_Stop

@ Description

This function is used to stop the DMA data transferring. After executing this function, the internal A/D trigger is disabled and the A/D timer (timer #1 and #2) is stopped. The function returns the number of the data which has been transferred, no matter if the A/D DMA data transfer is stopped by this function or by the DMA terminal count ISR.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_DMA_Stop( int *count, int
                      *start_idx)
```

C/C++ (Windows 95)

```
int W_9118_AD_DMA_Stop(U16 cardNo, int *count,
                      int *start_idx )
```

Visual Basic (Windows 95)

```
W_9118_AD_DMA_Stop (ByVal cardNo As Integer,
                    count As Long, start_idx As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2, ..., PCI_CARD12.

count: the number of A/D converted data which has been transferred.

start_idx: The index where the data start from in user's buffer, i.e the sequence of read data is:

```
buff[start_idx], buff[start_idx+1], ..., buff[0], buff[1], ...,
buff[start_idx-1].
```

@ Return Code

```
ERR_NoError
ERR_BoardNoInit
```

6.39 `_9118_ContDmaStart`

@ Description

This function performs continuous A/D conversion with double-buffered DMA data transfer and the pacer trigger (internal timer trigger). It takes place in the background which will not stop until your program execute `_9118_ContDmaStop()` function to stop the process.

After executing this function, it is necessary to check the status of circular buffer by using the function `_9118_CheckHalfReady()` and using `_9118_DblBufferTransfer()` to copy the A/D converted data to transfer buffer.

In current version of software, double-buffered DMA data transfer does not support trigger acquisition mode (pre-trigger, post-trigger, or about-trigger).

There is a group function for continuous A/D conversion using double-buffered DMA transfer as following:

```
_9118_ContDmaStart();  
_9118_CheckHalfReady();  
_9118_DblBufferTransfer();  
_9118_GetOverrunStatus();  
_9118_ContDmaStop();
```

The value of converted A/D data is from 0 to 4095 (9118DG/L, HG/L) or from 0 to 65535 (9118HR/L).

@ Syntax

C/C++ (DOS)

```
_9118_ContDmaStart(int clk_src, unsigned int  
count, unsigned long *doubleBuf, int c1,  
int c2)
```

C/C++ (Windows 95)

```
W_9118_ContDmaStart(U16 cardNo, int clk_src,  
unsigned int count, HANDLE memID, int c1,  
int c2)
```

Visual Basic (Windows 95)

```
W_9118_ContDmaStart (ByVal cardNo As Integer,  
ByVal clk_src, ByVal count As Long, ByVal
```

```
handle As Long, ByVal c1 As Long, ByVal c2
As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2..., PCI_CARD12.


clk_src: the clock source for the timer trigger of AD conversion. The valid clock sources are: A_9118_AD_IntSrc, A_9118_AD_ExtSrc

count: the size of circular buffer in samples

db_buffer (DOS): the start address of the memory of the circular buffer to store the A/D data, the buffer size must large than count.

This memory should be double-word alignment, the ad_buff format is as following:

ad_buffer is a 32-bit data buffer, but the A/D data is 16-bit format. For PCI-9118/L, the data format of ad_buffer is as follows:



Every 16-bit data:

D11 D10 D9 D1 D0 C3 C2 C1 C0

Where D11, D10, ...D0 : A/D converted data

C3, C2, C1, C0 : converted channel no (for 9118DG/L, HG/L)

D15, D14,...D0: A/D converted data (for 9118HR/L)

Please refer to the sample program, ad_demo3.c, included in the software library CD we provide to get the idea how to get each data sampled (16-bit).

memID (Win-95): the memory ID of the allocated system AI memory. In Windows 95 environment, before calling W_9118_ContDMAStart, W_9118_Alloc_AI_Mem must be called to allocate a contiguous AI memory. W_9118_Alloc_AI_Mem will return a memory ID for identify the allocated AI memory, as well as the linear address of the AI memory for user to access the data.

The format of the A/D data is the same as DOS buffer (ad_buff argument).

c1: the 16-bit timer frequency divider of timer channel #1

c2: the 16-bit timer frequency divider of timer channel #2

Note: The A/D sampling rate is equal to $4\text{MHz} / (c1 * c2)$.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit,  
ERR_InvalidADChannel,  
ERR_AD_InvalidGain,  
ERR_InvalidTimerValue
```

6.40 _9118_CheckHalfReady

@ Description

When you use `_9118_ContDmaStart()` to convert A/D data then you must use `_9118_CheckHalfReady()` to check whether data half full or not in circular buffer, and then can use `_9118_DblBufferTransfer()` to copy data to transfer buffer.

@ Syntax

C/C++ (DOS)

```
int _9118_CheckHalfReady(int *halfReady, int
                        *stop_flag)
```

C/C++ (Windows 95)

```
int W_9118_CheckHalfReady(U16 cardNo, int
                        *halfReady, int *stop_flag)
```

Visual Basic (Windows 95)

```
W_9118_CheckHalfReady (ByVal cardNo As Integer,
                        halfReady As Long, stop_flag As Long) As
                        Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are `PCI_CARD1`, `PCI_CARD2`,..., `PCI_CARD12`.

halfReady: 1 (TRUE) or 0 (FALSE).

stop_flag: Whether the AD conversion is stopped.

0: not stopped.

1: stopped.

@ Return Code

```
ERR_NoError
```

6.41 _9118_DblBufferTransfer

@ Description

Using this function to copy the converted A/D data from circular to transfer buffer. The value of converted A/D data is from 0 to 4095 (9118DG/L, HG/L) or from 0 to 65535 (9118HR/L).

@ Syntax

C/C++ (DOS)

```
int _9118_DblBufferTransfer(unsigned short  
    *userBuffer)
```

C/C++ (Windows 95)

```
int W_9118_DblBufferTransfer(U16 cardNo, unsigned  
    short *userBuffer)
```

Visual Basic (Windows 95)

```
W_9118_DblBufferTransfer (ByVal cardNo As  
    Integer, userBuffer As Integer) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

userBuffer: user transfer buffer for A/D converted data, every time _9118_DblBufferTransfer() copies half size of circular buffer to userBuffer. The size of circular in samples is specified in _9118_ContDmaStart() function call.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.42 _9118_GetOverrunStatus

@ Description

When you use `_9118_ContDmaStart()` to convert A/D data and if you do not use `_9118_DblBufferTransfer()` to copy converted data then the circular buffer overrun will occur. You can use this function to check overrun count.

@ Syntax

C/C++ (DOS)

```
int _9118_GetOverrunStatus(int *overrunCount)
```

C/C++ (Windows 95)

```
int W_9118_GetOverrunStatus(U16 cardNo, int  
*overrunCount)
```

Visual Basic (Windows 95)

```
W_9118_GetOverrunStatus (ByVal cardNo As Integer,  
overrunCount As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are `PCI_CARD1`, `PCI_CARD2`,..., `PCI_CARD12`.

overrunCount: number of overrun counts.

@ Return Code

```
ERR_NoError
```

6.43 _9118_ContDmaStop

@ Description

This function is used to stop the continuous double-buffered DMA data transfer.

@ Syntax

C/C++ (DOS)

```
int _9118_ContDmaStop(unsigned int *count)
```

C/C++ (DOS)

```
Int W_9118_ContDmaStop(U16 cardNo, unsigned int  
*count)
```

Visual Basic (Windows 95)

```
W_9118_ContDmaStop (ByVal cardNo As Integer,  
count As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2, ..., PCI_CARD12.

count: the next position after the position the last A/D data is stored in the circular buffer.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit  
ERR_AD_DMANotSet
```

6.44 _9118_AD_INT_Start

@ Description

This function performs A/D conversion N times with interrupt data transfer by using pacer trigger. It takes place in the background which will not stop until the N-th conversion has been completed or your program execute `_9118_AD_INT_Stop()` function to stop the process. After executing this function, it is necessary to check the status of the operation by using the function `9118_AD_INT_Status()`. The value of A/D converted data is from 0 to 4095 (9118DG/L, HG/L) or from 0 to 65535 (9118HR/L).

@ Syntax

C/C++ (DOS)

```
int _9118_AD_INT_Start( int count , unsigned long
                      *ad_buffer, int c1, int c2 )
```

C/C++ (Windows 95)

```
int W_9118_AD_INT_Start(U16 cardNo, int count ,
                       HANDLE memID, int c1, int c2 )
```

Visual Basic (Windows 95)

```
W_9118_AD_INT_Start (ByVal cardNo As Integer,
                     ByVal count As Long, ByVal handle As Long,
                     ByVal c1 As Long, ByVal c2 As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are `PCI_CARD1`, `PCI_CARD2`,..., `PCI_CARD12`.

count: the number of A/D conversion in samples

ad_buffer (DOS): the start address of the memory buffer to store the A/D data, the buffer size must large than the number of A/D conversion

This memory should be double-word alignment,

The `ad_buff` format is as following: (Note: the `ad_buffer` format is not the same as that in 6.2.36. Please refer to sample program `ad_demo 2.c`)

DATA 1	DATA 2	DATA 3	DATA N
16-bit	16-bit	16-bit		16-bit

Every 16-bit data:

D11 D10 D9 D1 D0 C3 C2 C1 C0

where D11, D10, ... , D0: A/D converted data

C3, C2, C1, C0: converted channel no (9118DG/L, HG/L)

D15, D14, ..., D0: A/D converted data (9118HR/L).

memID (Win-95): the memory ID of the allocated system AI memory. In Windows 95 environment, before calling `W_9118_AD_INT_Start`, `W_9118_Alloc_AI_Mem` must be called to allocate a contiguous AI memory. `W_9118_Alloc_AI_Mem` will return a memory ID for identify the allocated AI memory, as well as the linear address of the AI memory for user to access the data. The format of the A/D data is the same as DOS buffer (`ad_buff` argument).

c1: the 16-bit timer frequency divider of timer channel #1

c2: the 16-bit timer frequency divider of timer channel #2

Note: the A/D sampling rate is equal to $4\text{MHz} / (c1 * c2)$.

@ Return Code

```
ERR_NoError
ERR_BoardNoInit
ERR_InvalidTimerValue
```

6.45 _9118_AD_INT_Status

@ Description

Since the `_9118_AD_INT_Start()` function executes in background, you can issue the function `_9118_AD_INT_Status()` to check the status of interrupt operation.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_INT_Status( int *status, int *count
                        )
```

C/C++ (Windows 95)

```
int W_9118_AD_INT_Status(U16 cardNo, int *status,
                        int *count)
```

Visual Basic (Windows 95)

```
W_9118_AD_INT_Status (ByVal cardNo As Integer,
                      status As Long, count As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are `PCI_CARD1`, `PCI_CARD2`,..., `PCI_CARD12`.

status: status of the interrupt data transfer

- 0: `AD_INT_INIT` :initializes transfer
- 1: `AD_INT_RUN` :transfer is not completed
- 2: `AD_INT_STOP` :transfer is completed

count: current conversion count number.

@ Return Code

```
ERR_NoError
ERR_BoardNoInit
```

6.46 _9118_AD_INT_Stop

@ Description

This function is used to stop the interrupt data transfer function. After executing this function, the internal A/D trigger is disabled and the A/D timer is stopped. The function returns the number of the data which has been transferred.

@ Syntax

C/C++ (DOS)

```
int _9118_AD_INT_Stop( int *count )
```

C/C++ (Windows 95)

```
int W_9118_AD_INT_Stop(U16 cardNo, int *count )
```

Visual Basic (Windows 95)

```
W_9118_AD_INT_Stop (ByVal cardNo As Integer,  
count As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2, ..., PCI_CARD12.

count: the number of A/D data which has been transferred.

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit  
ERR_AD_INTNotSet
```

6.47 _9118_TIMER_Start

@ Description

The Timer #0 on the PCI-9118/L can be freely programmed by the users. This function is used to program the Timer #0. This timer can be used as frequency generator if internal clock is used. It also can be used as event counter if external clock is used.

@ Syntax

C/C++ (DOS)

```
int _9118_TIMER_Start( int timer_mode, unsigned
                      int c0 )
```

C/C++ (Windows 95)

```
int W_9118_TIMER_Start(U16 cardNo, int
                       timer_mode, U16 c0 )
```

Visual Basic (Windows 95)

```
W_9118_TIMER_Start (ByVal cardNo As Integer,
                    ByVal timer_mode As Long, ByVal c0 As Long)
                    As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2, ..., PCI_CARD12.

timer_mode: the 8254 timer mode, the possible values are:

```
TIMER_MODE0, TIMER_MODE1,
TIMER_MODE2, TIMER_MODE3,
TIMER_MODE4, TIMER_MODE5.
```

c0: the counter value of timer

@ Return Code

```
ERR_NoError
ERR_BoardNoInit
ERR_InvalidTimerMode
```

Note: If TIMER_MODE4 is used, C0 is one smaller than the counter number you specify. That is, if the counter number you specify is 100, the C0 is set as 99.

6.48 _9118_TIMER_Read

@ Description

This function is used to read the counter value of the Timer #0.

@ Syntax

C/C++ (DOS)

```
int _9118_TIMER_Read( unsigned int *counter_value  
                    )
```

C/C++ (Windows 95)

```
int W_9118_TIMER_Read(U16 cardNo, unsigned int  
                      *counter_value)
```

Visual Basic (Windows 95)

```
W_9118_TIMER_Read (ByVal cardNo As Integer,  
                  counter_value As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

counter_value: the counter value of the Timer #0

@ Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

6.49 _9118_TIMER_Stop

@ Description

This function is used to stop the timer operation. The timer is set to the 'One-shot' mode with counter value '0'. That is, the clock output signal will be set to high after executing this function.

@ Syntax

C/C++ (DOS)

```
int _9118_TIMER_Stop( unsigned int *counter_value  
                    )
```

C/C++ (Windows 95)

```
int W_9118_TIMER_Stop(U16 cardNo, unsigned int  
                    *counter_value )
```

Visual Basic (Windows 95)

```
W_9118_TIMER_Stop (ByVal cardNo As Integer,  
                  counter_value As Long) As Long
```

@ Argument

cardNo (Win-95): the card number of PCI-9118/L to be initialized, totally 4 cards can be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

counter_value: the current counter value of the Timer #0.

@ Return Code

```
ERR_Board_NoInit  
ERR_NoError
```

6.50 W_9118_Set_Trig

@ Description

This function is used to set up a trigger. The function specifies the trigger mode and post trigger count. Please refer to section 5.1.4 for the detailed description of trigger setting. This function is only supported by Windows 95 version.

@ Syntax

C/C++ (Windows 95)

```
Int W_9118_Set_Trig(U16 cardNo, int trig_mode,  
U16 post_trig_cnt)
```

Visual Basic (Windows 95)

```
W_9118_Set_Trig (ByVal cardNo As Integer, ByVal  
trig_mode As Integer, ByVal post_trig_cnt As  
Long) As Long
```

@ Argument

cardNo: the card number of PCI-9118/L to be initialized, the valid card numbers are PCI_CARD1, PCI_CARD2,..., PCI_CARD12.

trig_mode: selected trigger mode. The valid values are the following:

SOFT_TRIG: Software trigger

POST_TRIG: Post trigger

PRE_TRIG: Pre-trigger

ABOUT_TRIG: About trigger

post_trig_cnt: The post trigger count. it will count down the Timer#0 after the trigger condition was met (About trigger) or at the moment DMA operation starts(Post-trigger). When the count reaches 0, the counter stops. The counter is used to control the post trigger sampling count of about trigger and control the sampling count of post trigger mode. For Pre-trigger mode, this argument has to be set as 1.

Note: For post trigger mode and about trigger mode, the value of **post_trig_cnt** should be smaller than the value of count set in

9118_AD_DMA_Start to get the all the data transferred during Timer#0 counts down. Please refer to section 6.2.36 for the detailed description.

@ Return Code

PCICardNumErr
PCICardNotInit
InvalidClkDiv
NoError

6.51 W_9118_Alloc_AI_Mem

@ Description

Contact Windows 95 system to allocate a block of contiguous memory for continuous AI transfer. This function is only available in Windows 95 version.

@ Syntax

C/C++ (Windows 95)

```
int W_9118_Alloc_AI_Mem (U32 buf_size, HANDLE  
*memID, U32 *linearAddr, U32 * phyAddr)
```

Visual Basic (Windows 95)

```
W_9118_Alloc_AI_Mem (ByVal buf_size As Long,  
memID As Long, linearAddr As Long, phyAddr  
As Long) As Long
```

@ Argument

buf_size: Bytes to allocate. Please be careful, the unit of this argument is BYTE, not SAMPLE.

memID: If the memory allocation is successful, driver returns the ID of that memory in this argument. Use this memory ID in W_9118_AD_DMA_Start, W_9118_AD_INT_Start and W_9118_ContDmaStart function calls.

linearAddr: The linear address of the allocated AI memory. You can use this linear address as a pointer in C/C++ to access the AI data.

phyAddr: The physical address of the allocated AI memory.

@ Return Code

```
NoError  
AllocDMAMemFailed
```

6.52 W_9118_Free_AI_Mem

@ Description

De-allocate a system AI memory under Windows 95 environment.
This function is only available in Windows 95 version.

@ Syntax

C/C++ (Windows 95)

```
int W_9118_Free_AI_Mem (HANDLE memID)
```

Visual Basic (Windows 95)

```
W_9118_Free_AI_Mem (ByVal memID As Long) As Long
```

@ Argument

memID: The memory ID of the system AI memory to deallocate.

@ Return Code

```
NoError
```

6.53 W_9118_Get_Sample

@ Description

For the language without pointer support such as Visual Basic, programmer can use this function to access the index-th data in AI buffer.

@ Syntax

C/C++ (Windows 95)

```
int W_9118_Get_Sample (U32 linearAddr, U32 index,  
                      I16 *ai_data)
```

Visual Basic (Windows 95)

```
W_9118_Get_Sample (ByVal linearAddr As Long,  
                  ByVal idx As Long, ai_data As Integer) As  
Long
```

@ Argument

linearAddr: The linear address of the allocated AI memory.

index: The index of the sample. The first sample is with index 0.

ai_data: Returns the sample retrieved.

@ Return Code

```
NoError
```

7 Calibration

In data acquisition process, how to calibrate your measurement devices to maintain its accuracy is very important. Users can calibrate the analog input and analog output channels under the users' operating environment for optimizing the accuracy. This chapter will guide you to calibrate your PCI-9118/L to an accuracy condition.

7.1 What do you need

Before calibrating your PCI-9118/L card, you should prepare some equipment's for the calibration:

- ▶ Calibration program: Once the program is executed, it will guide you to do the calibration. This program is included in the delivered package
- ▶ A 5 1/2 digit multimeter (6 1/2 is recommended)
- ▶ A voltage calibrator or a very stable and noise free DC voltage generator

7.2 VR Assignment

There are five variable resistors (VR) on the PCI-9118/L board to allow you making accurate adjustment on A/D channels. The function of each VR is specified as Table 7.1.

VR5	A/D full scale adjustment
VR6	A/D bipolar offset adjustment
VR7	A/D unipolar offset adjustment

Table 7-1: VRs Functions

7.3 A/D Adjustment

Bipolar Calibration

1. Set the analog input range as: $\pm 5V$, i.e. the gain = 1 and input mode = Bipolar.
2. Connect A/D channel 0 (pin 26 of CN1) to ground (pin 34 of CN1), and Applied a +5V to A/D channel 1 (pin 27 of CN1).
3. Trim VR6 to obtain the reading of A/D channel 0 flicks between 2048~2049 (9118DG/L, HG/L) or 0 to 1 (9118HR/L), and Trim VR5 to obtain reading of A/D channel 1 flicks between 4094~4095 (9118DG/L, HG/L) or 32766~32767 (9118HR/L).

Unipolar Calibration

1. Set the analog input range as: 0 ~ 10 V, i.e. the gain = 1 and input mode = Unipolar.
2. Applied a +5 V input signal to A/D channel 0, and trim the VR7 to obtain reading flicking between 2047~2048 (9118DG/L, HG/L) or 0~1 (9118HR/L).

8 Software Utility

This software CD provides a utility program, 9118util.exe which provides three functions, System Configuration, Calibration, and Functional Testing. This utility is designed as menu-driven based windowing style. Not only the text messages are shown for operating guidance, but also has the graphic to indicate you how to set right hardware configuration. This utility is described in the following sections.

8.1 Running 9118util.exe

After finishing the DOS installation, you can execute the utility by typing as follows (assume your utility is located in \ADLINK\DOS\9118\Util directory):

```
C> cd \ADLINK\DOS\9118\Util
C> 9118UTIL
```

the following diagram will be displayed on you screen. The message at the bottom of each window guides you how to select item, go to next step and change the default settings.

Note: all the D/A functions mentioned in this utility is useless.

***** PCI-9118 Utility Rev. 1.0 *****
Copyright © 1995-1997, ADLINK Technology Inc. All rights reserved.

<F1> : Configuration.
<F2> : Calibration.
<F3> : Function testing.
<Esc>: Quit.

>>> Select function key F1 ~ F3, or press <Esc> to quit. <<<

8.2 System Configuration

This function guides you to configure the PCI-9118/L card, and set the right hardware configuration. The configuration window shows the setting items that you have to set before using the PCI-9118/L card.

The following diagram will be displayed on the screen as you choose the Configuration function from main menu.

***** Calibration of PCI9118 *****

<1> Card Type	9118DG
<2> ADC Trigger Source	Internal
<3> Timer Clock Source	Internal
<4> AD Input Channel Config	Single-Ended
<5> AD Polarity setting	Bipolar
<6> AD Input Range	Gain=1 Bipolar(-5V~5V)

>>> <Up/Down>: Select Item, <PgUp/PgDn>: Change Setting <<<

8.3 Calibration

This function guides you to calibrate the PCI-9118/L. The calibration program serves as a useful test of the PCI-9118/L's A/D and DIO functions and can aid in troubleshooting if problems arise.

Note: For an environment with frequently large changes of temperature and vibration, a 3 months re-calibration interval is recommended. For laboratory conditions, 6 months to 1 year is acceptable.

When you choose the calibration function from the main menu list, a calibration items menu is displayed on the screen. After you select one of the calibration items from the calibration items menu, a calibration window shows. The upper window shows the detailed procedures which have to be followed when you proceed the calibration. The instructions will guide you to calibrate each item step by step. The bottom window shows the layout of PCI-9118/L. In addition, the proper Variable Resister (VR) will blink to indicate the related VR which needs to be adjusted for the current calibration step.

***** PCI-9118 Calibration *****

<1> D/A channel 1 voltage full range adjusting

<2> D/A channel 2 voltage full range adjusting

<3> A/D (Bipolar Gain = 1, -5V ~ 5V) adjusting

<4> A/D (Unipolar Gain = 1, -5V ~ 5V) adjusting

<Esc> Quit

Select 1 to 4 or <Esc> to quit calibration.

If you select 3, the following figure displays on the screen:


A/D (Bipolar, Gain = 1, -5V~5V) adjusting

Step 1: Connect CN1.AI0 (PIN 26) to CN1.GND (PIN 34)

Input 5V to CN1.AI1 (PIN 27)

Step 2: Trim VR6 until the value of AI0 is jumping from 2048 to 2049

Trim VR5 until the value of AI1 is jumping from 4094 to 4095

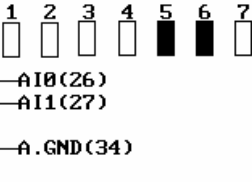

CH0 =2055

CH1 =4095

<ENTER> Completed AD Bipolar calibration.

<F10> Completed AD Bipolar calibration, otherwise repeat Step 1 to 4.

8.4 Functional Testing

This function is used to test the functions of PCI-9118/L, it includes Digital I/O testing, A/D polling testing, A/D Interrupt Testing, A/D with DMA testing, A/D with DMA & Burst Mode testing, A/D with DMA & BSSH testing, and A/D with DMA & post-trigger testing.

When you choose one of the testing function from the functions menu, a diagram is displayed on the screen. The figures below are the function testing menu window and A/D with Polling Testing window.

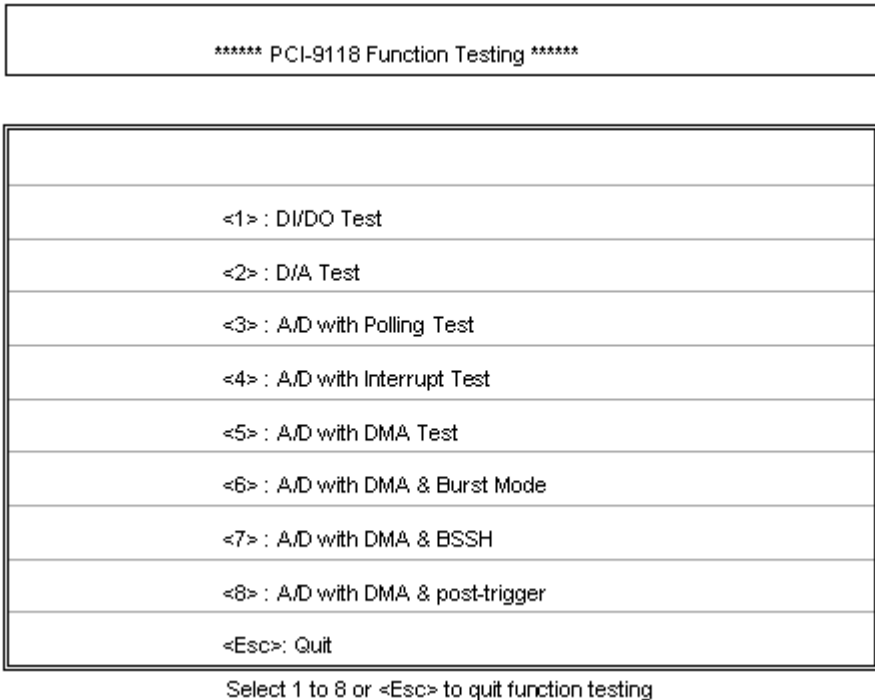


Figure 8-1: Function Testing Menu Window

```
***** ACL-9118DG/HG Utility Rev. 1.0 *****  
Copyright (c) 1995-1997, ADLink Technology Inc. All rights reserved.
```

```
<1> Connected input source to CN1.AI0, CN1.A.GND and CN1.AI1, CN1.A.GND  
== Software Poll A/D Channel 0, 1 ==  
Channel 0 = 2048 = 0.0012 Volt.  
Channel 1 = 1910 = -0.3358 Volt.
```

```
>>> Press <ESC> to stop <<<
```

Figure 8-2: A/D with Polling Test window

A calibration utility is supported in the software CD which is included in the product package. The detailed calibration procedures and description can be found in the utility. Users only need to run the software calibration utility and follow the procedures. You will get the accurate measure data.

In normal condition, the PCI-9118/L already calibrated by factor before it is shipped out. So, users do not need to calibrate your PCI-9118/L when you get it.

Warranty Policy

Thank you for choosing ADLINK. To understand your rights and enjoy all the after-sales services we offer, please read the following carefully.

1. Before using ADLINK's products please read the user manual and follow the instructions exactly. When sending in damaged products for repair, please attach an RMA application form which can be downloaded from: <http://rma.adlinktech.com/policy/>.
2. All ADLINK products come with a two-year guarantee:
 - ▶ The warranty period starts from the product's shipment date from ADLINK's factory.
 - ▶ Peripherals and third-party products not manufactured by ADLINK will be covered by the original manufacturers' warranty.
 - ▶ For products containing storage devices (hard drives, flash cards, etc.), please back up your data before sending them for repair. ADLINK is not responsible for loss of data.
 - ▶ Please ensure the use of properly licensed software with our systems. ADLINK does not condone the use of pirated software and will not service systems using such software. ADLINK will not be held legally responsible for products shipped with unlicensed software installed by the user.
 - ▶ For general repairs, please do not include peripheral accessories. If peripherals need to be included, be certain to specify which items you sent on the RMA Request & Confirmation Form. ADLINK is not responsible for items not listed on the RMA Request & Confirmation Form.

3. Our repair service is not covered by ADLINK's two-year guarantee in the following situations:
 - ▶ Damage caused by not following instructions in the user's manual.
 - ▶ Damage caused by carelessness on the user's part during product transportation.
 - ▶ Damage caused by fire, earthquakes, floods, lightning, pollution, other acts of God, and/or incorrect usage of voltage transformers.
 - ▶ Damage caused by unsuitable storage environments (i.e. high temperatures, high humidity, or volatile chemicals).
 - ▶ Damage caused by leakage of battery fluid during or after change of batteries by customer/user.
 - ▶ Damage from improper repair by unauthorized technicians.
 - ▶ Products with altered and/or damaged serial numbers are not entitled to our service.
 - ▶ Other categories not protected under our warranty.
4. Customers are responsible for shipping costs to transport damaged products to our company or sales office.
5. To ensure the speed and quality of product repair, please download an RMA application form from our company website: <http://rma.adlinktech.com/policy>. Damaged products with attached RMA forms receive priority.

If you have any further questions, please email our FAE staff: service@adlinktech.com.